cirago TV Platinum

CMC3000 Network Multimedia Center

Users Manual

Table of Contents

CHAPTER 1. GETTING STARTED 3

Welcome 3
Package Contents 3
Specifications Summary 4

CHAPTER 2. THE CIRAGOTV PLATINUM 5

The CiragoTV Platinum Network Multimedia Center 5
Remote Control 6

CHAPTER 2. GETTING CONNECTED 9

Connecting to a Computer 9
Connecting a USB Device 10
Connecting a Memory Card 10
Connecting to a TV via HDMI cable 11
Connecting to a TV via Composite (Red, White, Yellow Cable) 11
Connecting an AV In source to the CMC3000 12
Connecting to a Digital Amplifier 12
Connecting to a local area network 13
Connecting to a wireless network 13

CHAPTER 3. USING THE CIRAGOTV PLATINUM 14

Power On / Off 14
Home Menu 14
Video In Menu 14
Timer Record Menu 15
Browser Menu 17
Media Library 25
File Copy Menu 27
Internet Radio 28
P2P Share Menu 29
Setup Menu 32

CHAPTER 4. FIRMWARE UPGRADES 40

CHAPTER 5. APPENDICES 41

Frequently Asked Questions 41
Formatting the Hard Drive 44
NAS Function 45
Copyrights and Trademarks 45

CHAPTER 6. ADDITIONAL FEATURES 46

CHAPTER 7. WARRANTY, PRODUCT REGISTRATION & SUPPORT 46

Chapter 1. Getting Started

Welcome

Thank you for purchasing the CiragoTV Platinum Network Multimedia Center. We hope you will enjoy using this great home entertainment device. The Platinum has a number of convenient features including 1080p video playback, a built-in NAS, P2P file sharing, Internet radio, recording and time shifting capabilities, a built-in hard drive for storage, and more!

Package Contents

	Quantity
Media Player	1
AV cable (Composite)	1
USB cable	1
Remote Control	1
Remote Control Batteries	2
AC/DC adapter	1
AC/DC adapter Power Cord	1
Quick Installation Guide	1
User Manual (printed)	1
HDMI cable	1

Note:
The actual contents in the package might be different from the packing list in this manual.

Specifications Summary

I/O INTERFACES SUPPORTED:

- 3.5” SATA HDD (built-in)
- USB 2.0 HOST port x 2 (compatible to USB 1.1)
- Memory Card slot (supports SD/MMC/MS/MS Pro)
- USB 2.0 DEVICE port (connecting to PC)
- Composite (CVBS) A/V IN jack
- Composite (CVBS) A/V OUT jack
- HDMI V1.3 interface
- S/PDIF coaxial & optical jack
- DC-IN 12V

FILE SYSTEMS SUPPORTED:

- FAT/FAT32/NTFS/EXT3

CONTENT FORMATS SUPPORTED:

- Video: MPEG1/2/4, RM/RMVB, VC-1, H.264
- Video File Extension: .mp4, .mov, .xvid, .avi, .divx, asf, .wmv, .mkv,.rm, .rmvb, .flv, .ts, .m2ts, .dat, .mpg, .vob
- Audio: MP3, WAV, OGG, WMA, FLAC
- Image: JPEG, BMP, PNG, GIF, TIFF
- Subtitle: SRT, SMI, SSA, ASS, IDX/SUB, SUB

NETWORK FEATURE

- 10/100Mbps Auto-Negotiation Ethernet
- 802.11b/g/n WLAN, up to 300Mbps (supported by optional WLAN USB Adapter)

VIDEO RECORDING

- AV IN recording format: MPG(MPEG2,MP2)

Note: The specifications and design of this product are subject to change without notice.

Chapter 2. The CiragoTV Platinum

The CiragoTV Platinum Network Multimedia Center

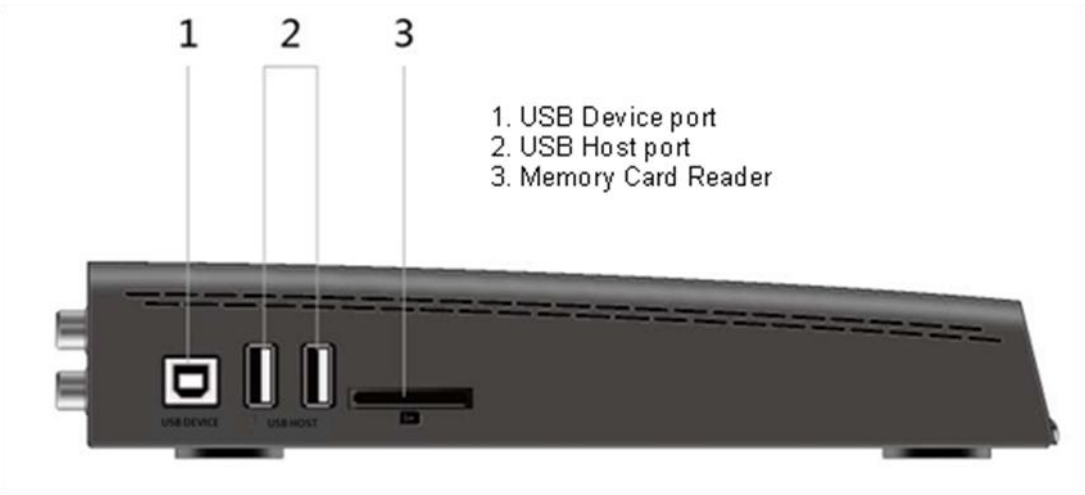

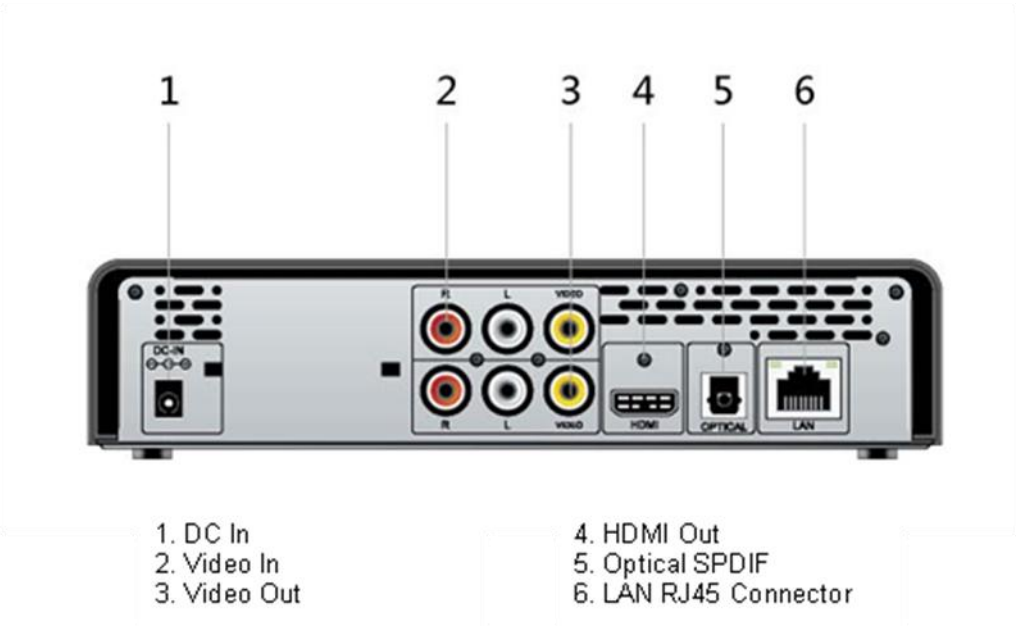

Remote Control

All procedures in this manual can be carried out using the remote control buttons.
ɛ the following for details on each button and

ction:

1. POWER ON / OFF
2. MUTE
3. TV SYSTEM
4. BROWSER
5. NUMERIC BUTTONS
6. REPEAT
7. FAST REWIND
8. VOLUME -
9. FAST FORWARD
10. PLAY / PAUSE
11. HOME
12. NAVIGATION
13. MENU
14. TIMESHIFT
15. SLOW PLAY
16. ZOOM
17. AUDIO
18. SELECT
19. CONFIRM
20. NO FUNCTION
21. NO FUNCTION
22. SUBTITLE
23. ANGLE
24. A-B
25. GO TO
26. SETUP
27. RETURN
28. STOP
29. NEXT
30. VOLUME +
31. PREVIOUS
32. INFO
33. COPY
34. MUSIC
35. REC

No.	Button	Function
1	**POWER ON / OFF**	Press to turn on / off
2	**MUTE**	Press to mute audio output, and press again to resume
3	**TV SYSTEM**	Press to switch between NTSC, PAL, 480p, 576p, 720p, 1080i, and 1080p
4	**BROWSER**	Press to enter the Browser menu
5	**NUMERIC BUTTONS**	Press to enter numeric input when changing settings
6	**REPEAT**	Press to set repeat mode: One, All, Shuffle
7	**FAST REWIND**	Press to fast rewind the current playback. Press

		repeatedly to select speeds
8	**VOLUME -**	Press to decrease the volume
9	**FAST FORWARD**	Press to fast forward the current playback. Press repeatedly to select speeds
10	**PLAY/PAUSE**	Press to begin/pause the playback
11	**HOME**	Press to enter the home screen
12	**NAVIGATIONAL BUTTONS**	Press the arrow buttons to select menu options, and the **ENTER** button to confirm
13	**MENU**	Press to activate tools menus: --Press to rename and delete files in the browser menu --Press to add shortcuts for network access in My_Shortcuts in NET of the browser menu -- Press to select a file to copy or move in “File Copy”
14	**TIME SHIFT**	Press to activate the time shift function. Time shift function allows you to pause live TV and resume the program from the point at which you left it. While paused, the program is recorded to the internal HDD as long as space is available. Time shift mode remains active until you press the **stop** button
15	**SLOW**	Press to play back in slow motion. Press the **PLAY** button to resume regular playback
16	**ZOOM**	Press to zoom in on the image (photo or video)
17	**AUDIO**	Press to select an audio track
18	**SELECT**	Press to select a file to add to the playlist
19	**CONFIRM**	Press to confirm a file to be added to the playlist
20	**NO FUNCTION**	No function assigned
21	**NO FUNCTION**	No function assigned
22	**SUBTITLE**	Press to set subtitle options
23	**ANGLE**	Press to change the view angle during DVD (with multi-angle) playback
24	**A-B**	Press to set the beginning and end point of a section in a video to repeat
25	**GOTO**	Press to jump to a specific point on a title. Specify the point using Title, Chapter and Time
26	**SETUP**	Press to enter the setup menu
27	**RETURN**	Press to return to the previous screen while navigating

		menus
28	**STOP**	Press to stop playback
29	**NEXT**	Press to view the next file / page down
30	**VOLUME +**	Press to increase the volume
31	**PREV**	Press to view the previous file / page up
32	**INFO**	Press to hide or display the information bar during playback
33	**COPY**	Press to enter the file copy menu
34	**MUSIC**	Press to start playing music in the music playlist
35	**RECORD**	Press to begin recording Press repeatedly to set one touch recording (OTR) length (30 MIN. / 60 MIN. / 90 MIN. / 120 MIN. / 180 MIN. / 240 MIN. / Off)

Chapter 2. Getting Connected

Connecting to a Computer

1. Make sure the player is powered on;

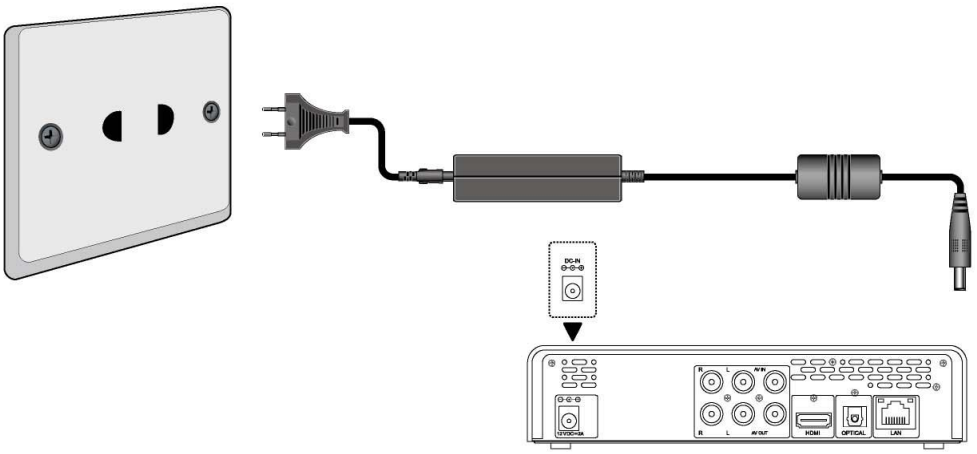

2. Plug in the square-shaped connector of the USB cable to this player's USB DEVICE port;
3. Plug in the rectangular connector of the USB cable to computer.

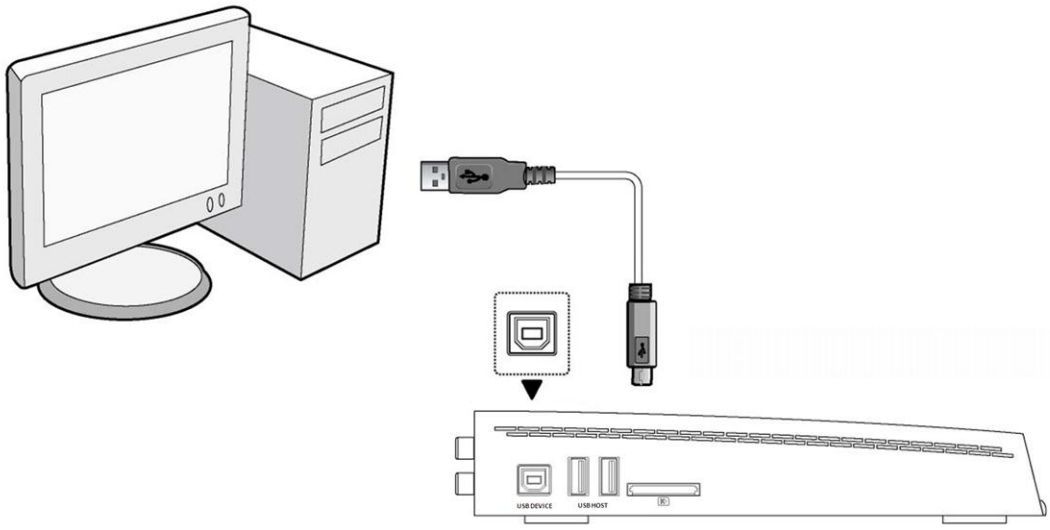

Media files can be transferred between the computer and the CiragoTV Platinum HD when it is connected to your computer.

Connecting a USB Device

1. Make sure the player is powered on;
2. Plug in a USB mass storage device such as a flash drive, or an external hard drive to the USB HOST port of this player. A wireless USB adapter can also be connected to the USB host port.

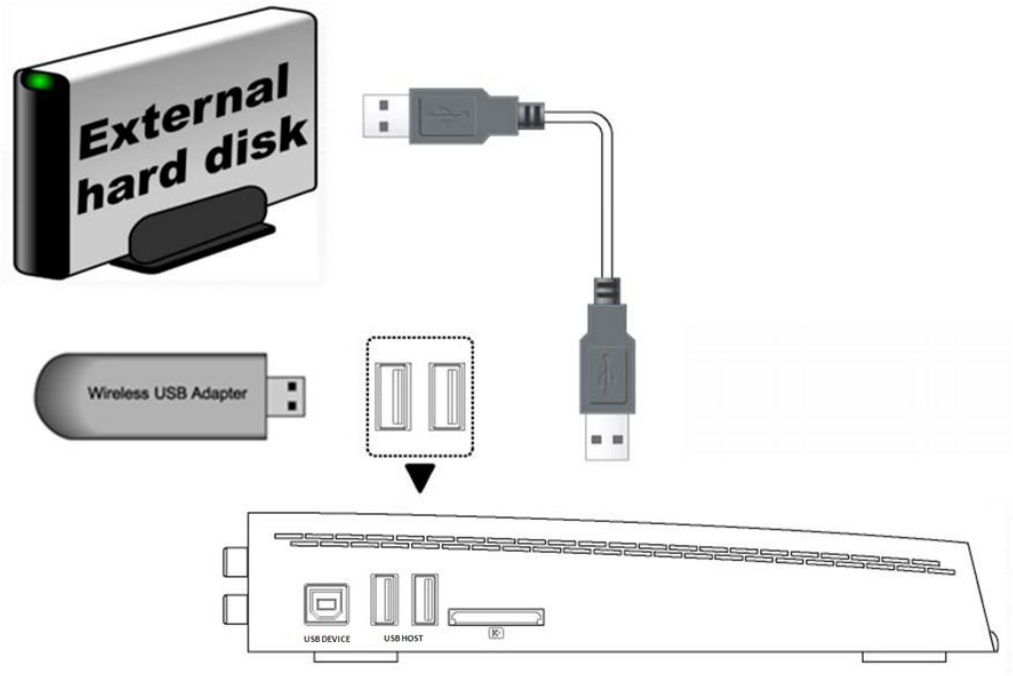

Contents of any USB mass storage device connected to the CiragoTV Platinum can be viewed directly on your TV.

Connecting a Memory Card

SD, MMC, MS or MS Pro memory cards can be used when inserted into the CiragoTV Platinum's memory card slot.

1. Insert the memory card as shown below.

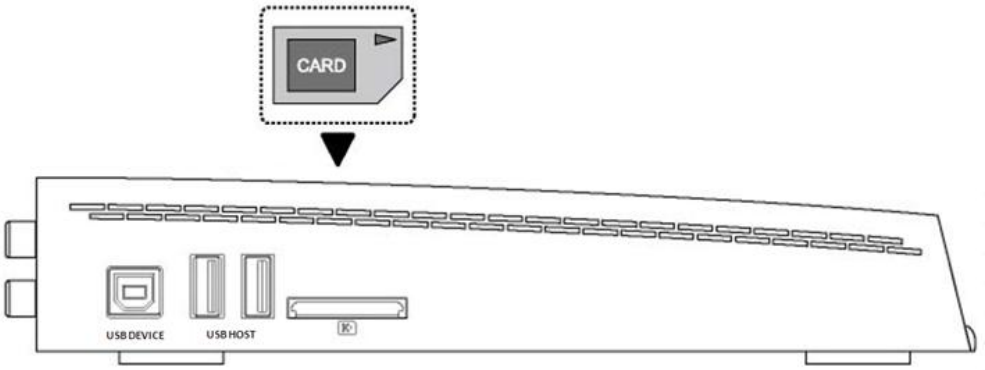

Photos, music, and videos stored on the memory card can be viewed directly on the TV that the CiragoTV Platinum HD is connected to.

Connecting to a TV via HDMI cable

1. Plug one connector of the HDMI cable to the player's HDMI jack;
2. Plug the other connector of the HDMI cable to the TV's HDMI jack.
3. Set the input of your TV to HDMI. Your TV may have more than one HDMI jack, so set the TV input to the corresponding HDMI input that is connected to the CiragoTV Platinum. This can be done using the "Input" button on the TV's remote control.

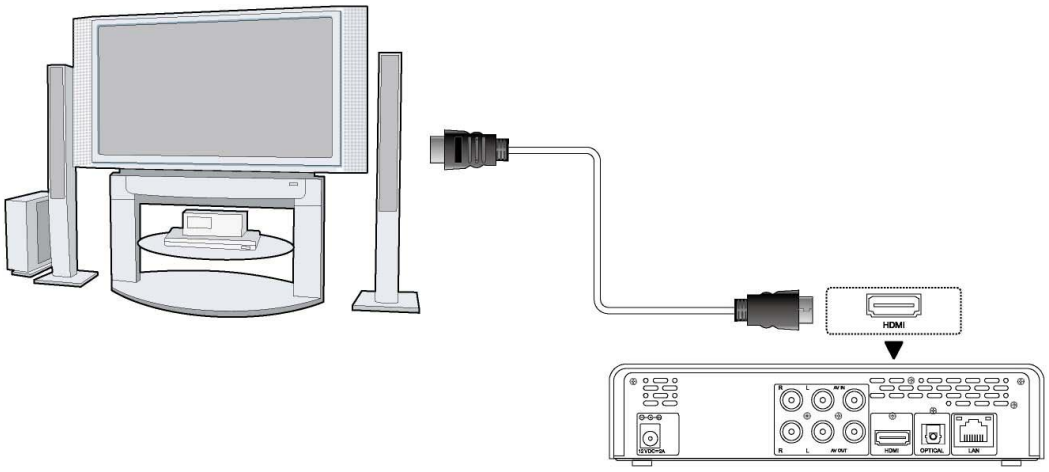

Connecting the CiragoTV Platinum to your TV using the HDMI cable will provide the best video quality.

Connecting to a TV via Composite (Red, White, Yellow Cable)

1. Plug in the 3 color connector to the player's A/V OUT jack;
2. Plug in the 3 color connector to the TV's A/V IN or Video in jack.
3. Set the input of your TV to "Video". This function may also be called "Composite". Your TV may have more than one Video input jack, so set the TV input to the corresponding video input that is connected to the Platinum. This can be done using the "Input" button on the TV's remote control.

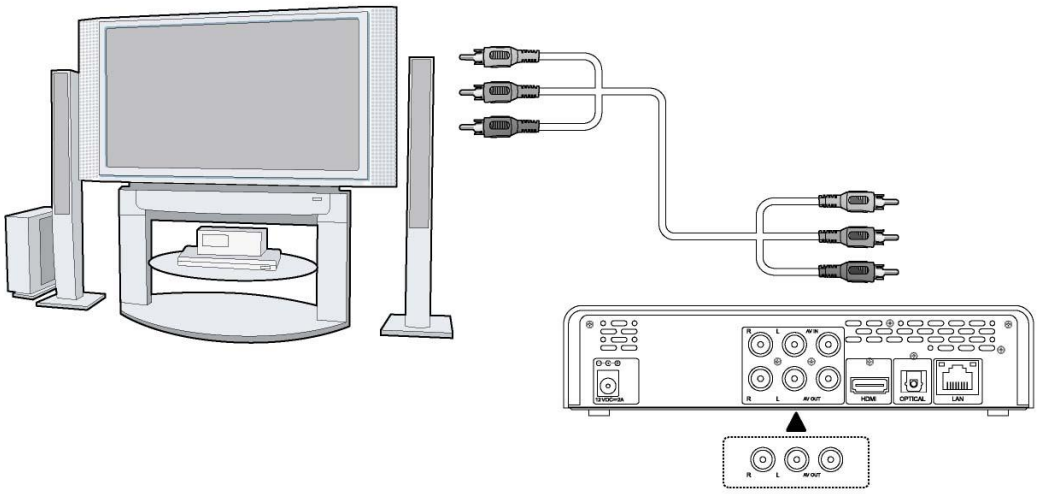

Connecting an AV In source to the CMC3000

1. Plug in the composite cables to the CiragoTV Platinum's A/V IN jack;
2. Plug in the composite cables to the A/V OUT jack of a cable box, set-top box, VHS player or DVD Player.
3. Press the "Home" button on the Platinum's remote control and select "AV In" to view the video playing from the AV In source.

.

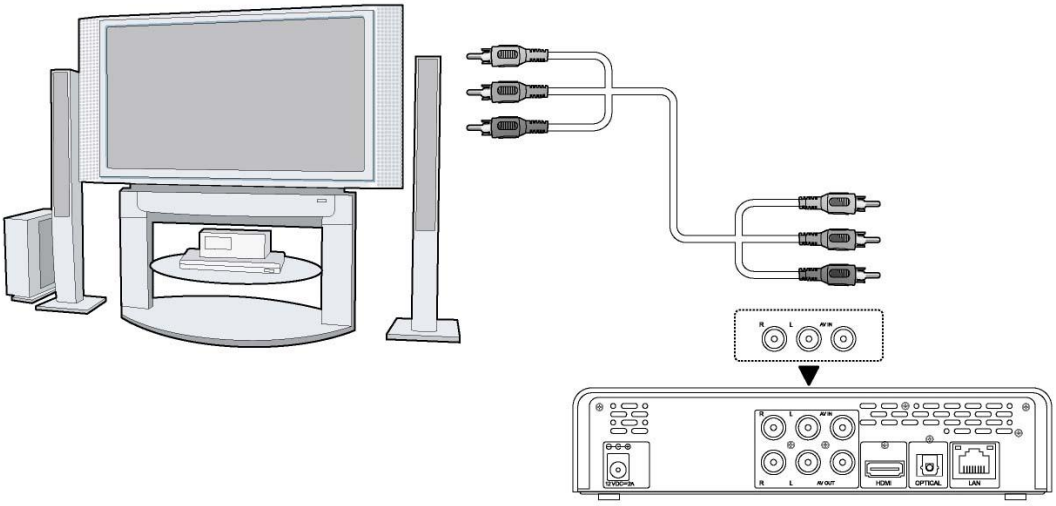

Connecting the cable or set-top box to the CiragoTV Platinum will enable the recording and time shifting of live TV shows.

Connecting to a Digital Amplifier

1. Plug in the RCA connector on your coaxial cable to the CiragoTV Platinum's S/PDIF Coaxial jack. Or if you use optical fiber, please plug in the Toslink connector on your optical fiber to the player's S/PDIF Optical jack;
2. Plug in the other connector on your coaxial cable or optical fiber to the digital audio device (digital amplifier or decoder).

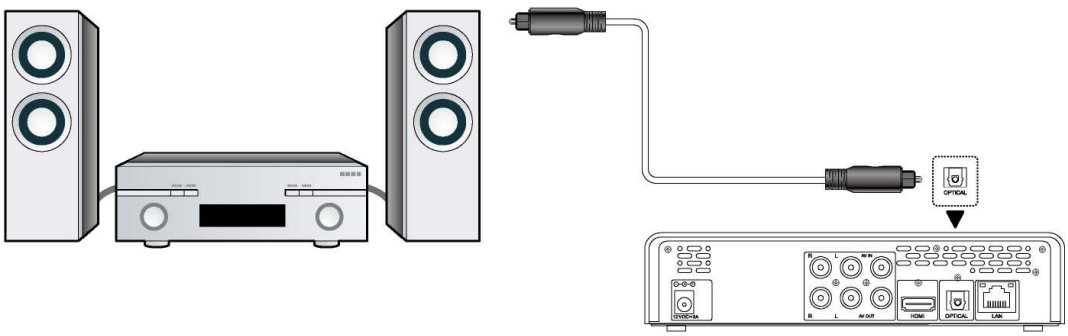

This setup will enable powerful Dolby Digital, DTS, or MPEG sound. (Please refer to **Audio Settings** in the Setup Menu in Chapter 3 for more details)

Connecting to a local area network

Use an RJ-45 Ethernet cable to connect the CiragoTV Platinum's to your router.

1. Connect one end of the cable to the player's RJ45 LAN socket;
2. Connect the end of the cable to a RJ45 LAN port on your router, switch, or hub.

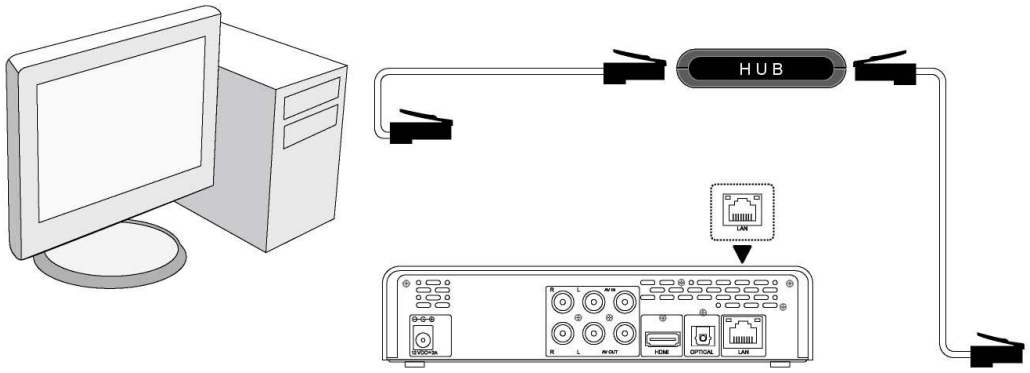

Connecting to a wireless network

1. Make sure the CiragoTV Platinum is powered on;
2. Plug the Wireless USB Adapter to the USB HOST port of the CiragoTV Platinum.

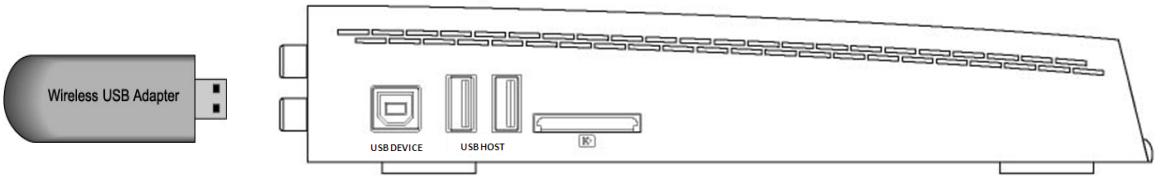

Note: The Wireless USB Adapter is an optional accessory sold separately. The Cirago model number for the recommended Wireless Adapter is CWA0300N. (Please refer to Network Settings in the Setup Menu in Chapter 3 for more details about wireless setup)

Chapter 3. Using the CiragoTV Platinum

Power On / Off

After connecting the DC IN jack, press the power button located on the front panel of the CiragoTV Platinum, or press the power button on the remote control, and the CiragoTV Platinum's will enter the home menu screen, and the power indicator will turn blue.

To turn off the Platinum, press the power button on the remote control or the power button on the front panel, and the power indicator will turn red. Then unplug the power cord to cut off the power supply.

Home Menu

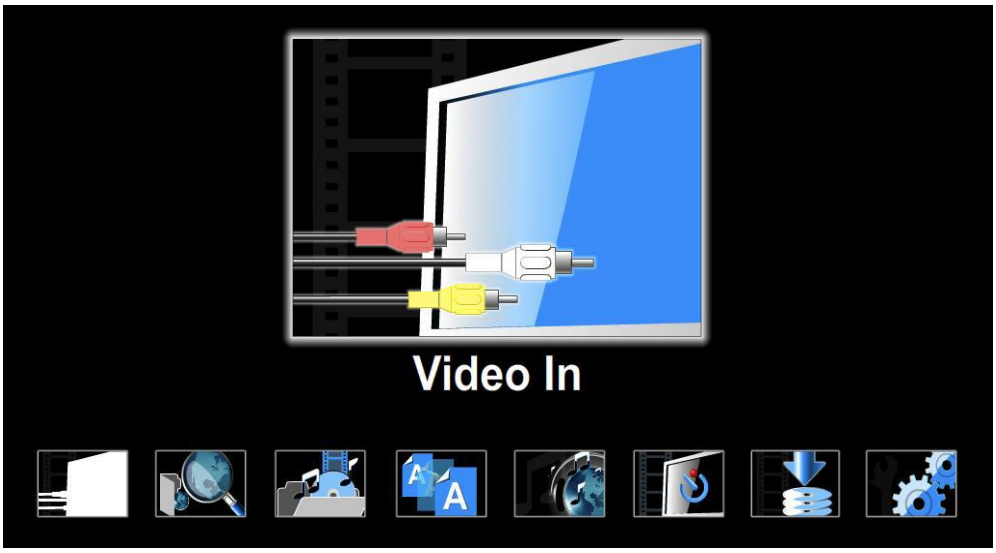

The Home menu appears when the media player is powered on. This menu provides access to all the different features and functions on the CiragoTV Platinum's. The options include:

Video In – Display video from AV input (Example: Cable / Satellite box)
Browser – Browse and Play media files
Media Library – Search through all the files on the CiragoTV Platinum
File Copy – Copy Files and move them between the CiragoTV Platinum and connected devices
Internet Radio – Listen to Internet Radio stations
Timer Record – Schedule recordings of TV shows
P2P – Download torrent files directly to the CiragoTV Platinum
Setup – Change the settings on the CiragoTV Platinum

Video In Menu

The Video In menu displays the video signal that comes in from the cable box, set-top box, VHS, or DVD player that is connected to the AV In jack on the back panel of the CiragoTV Platinum. In this mode, recording and time shifting functions are enabled.
Select the **Video In** icon from the home menu.

Timer Record Menu

The **Timer Record** menu allows you to create, edit, and delete recording schedules and view the status and history of recordings. Select the **TIMER REC** icon from the home menu.

Create a New Schedule

Press the **LEFT** / **RIGHT** button on the remote control to select the **Edit** tab from the menu bar.

Select **Add a New Schedule** and press the **ENTER** button. The schedule setting screen will appear. Enter in the Date, Time, and Duration of the desired recording.

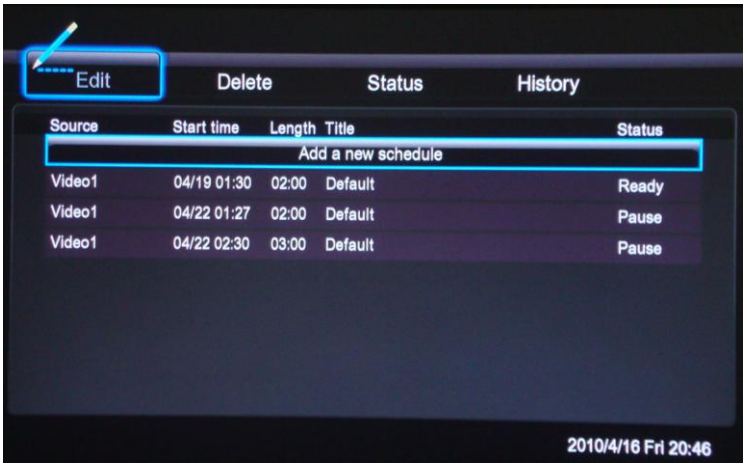

Use the **LEFT** / **RIGHT** button on the remote control to move between fields and press the **UP** / **DOWN** button to adjust each setting.

Source	Video 1 is displayed showing the current TV channel or Video In source.
Start Time	Enter the date and time of the recording.
Length	Enter the length of the recording.
Repeat	Select how often you want the schedule to record. Choose from Once, Everyday, Mon-Fri, Mon-Sat or select an individual day of the week.
Quality	Select the recording quality. Choose from HQ, SLP, EP, LP and SP. The higher the quality, the more space required on the hard drive. See **HDD Free Space** on the left of the screen for details on how long you can record for each setting.
Preview	This small preview window will show the current program of the selected channel.

Edit Schedule

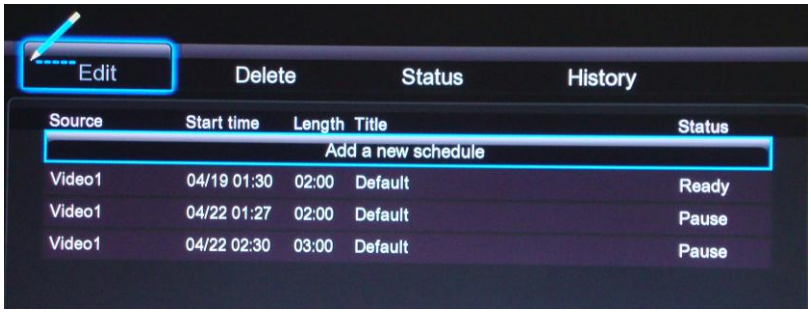

Press the **LEFT** / **RIGHT** button on the remote control to select the **Edit** tab from the menu bar.

Select the schedule you want to edit from the list and press the **ENTER** button. The schedule setting screen will appear. Modify the schedule as described in '***Create a New Schedule***'.

Delete Schedule

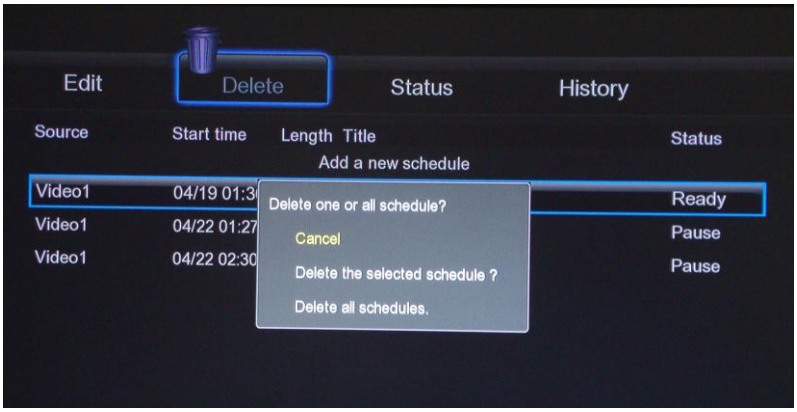

Press the **LEFT** / **RIGHT** button on the remote control to select the **Delete** tab from the menu bar.
Select the schedule you want to delete and press the **ENTER** button. A confirmation message will appear.

Select **CANCEL**, **Delete the selected schedule**, or **Delete all schedules**. Press the **ENTER** button to confirm.

View Schedule Status

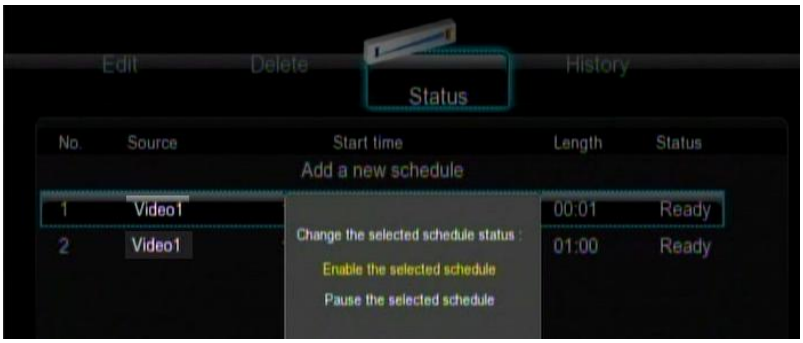

Press the **LEFT** / **RIGHT** button on the remote control to select the **Status** tab from the menu bar.
This will display the schedule list. Select a schedule and press the **ENTER** button.

Select **Enable the selected schedule** or **Pause the selected schedule**. Press the **ENTER** button to confirm.

Viewing Recording History

Press the **LEFT** / **RIGHT** button on the remote control to select the **History** tab from the menu bar. Here you can view a complete history of all previously set recordings.

Browser Menu

The browser menu allows you to browse and play media files stored on Removable Devices (USB, Card), the built-in hard drive (HDD), local Network, UPnP-server, and files added to the Playlist. To enter the menu, select the **Browser** icon on the home menu, or press the **BROWSER** button on the remote control.

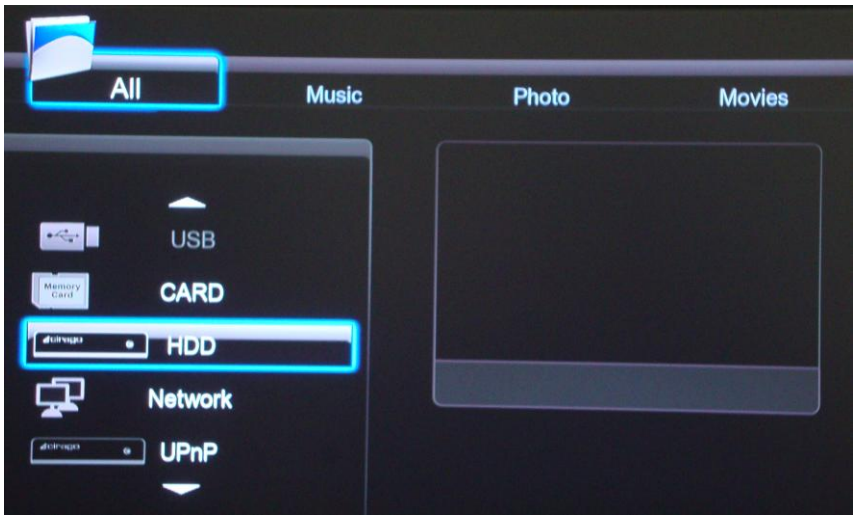

The following remote control buttons can be used while navigating the browser menu.

Button	Function
UP / **DOWN**	Move cursor up / down to select devices, folders, or files.
LEFT / **RIGHT**	Select filter options: **All, Music**, **Photos**, and **Movies**.
PREV / **NEXT**	Go to previous / next page.
ENTER	Enter or confirm the selected item.
SELECT	Select files under **Browser** > **HDD** menu.
CONFIRM	Add the selected files to the playlist.
RETURN	Return to the previous menu.

Browsing All

In this mode, all folders and supported contents (music, photos, and movies) will be displayed.

Note:

- Please refer to the Specifications Summary in Chapter 1 for more about the supported content formats.
- Music files might not be able to be played continously under the **All** filter, so please switch to the **Music** filter for that function if desired.

Browsing Music

Switch to the Music tab on the top of your screen by using the left and right navigation menus.
In this mode, all folders and supported audio files in current directory will be displayed.

The following buttons can be used to control music playback.

Button	Function
PLAY/PAUSE	Begin/pause playback.
FR / **FF**	Fast rewind or fast forward. Press repeatedly to select the speed.
REPEAT	Set repeat options: **One**, **All**, **Shuffle**
INFO	Hide or display the information bar during playback.
STOP	Stop playback.

Browsing Photos

Switch to the Photos tab on the top of your screen by using the left and right navigation menus. In this mode, all folders and supported image files in current directory will be displayed.

The following buttons can be used to control photo playback.

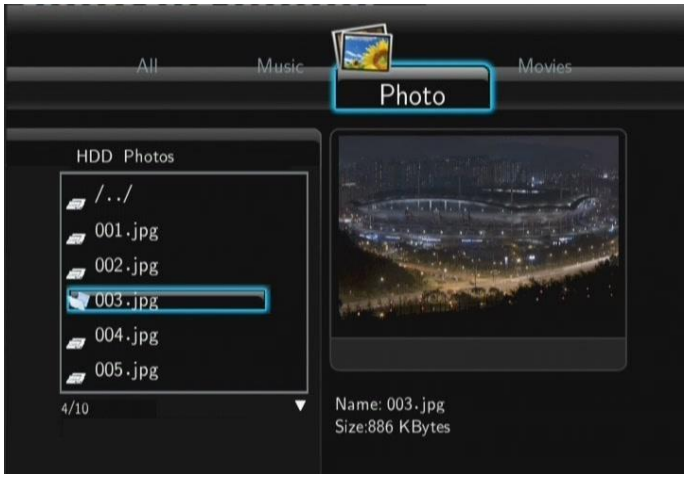

Button	Function
PLAY	Begin playback.
PREV / **NEXT**	View the previous or next photo.
LEFT / **RIGHT**	Rotate photo.
REPEAT	Set repeat options: **One**, **All**, **Shuffle**
ZOOM	Zoom in and out of the image.
INFO	Hide or display the information bar during playback.
STOP	Stop playback.

You can view photos in slide show mode with background music. Once the slideshow mode is enabled, the slide show starts automatically once you press the **PLAY** button. (Please refer to **Slide Show Timing**, **Transition Effect**, and **Background Music** in the Miscellaneous section in Chapter 3 for more details).

Browsing Movies

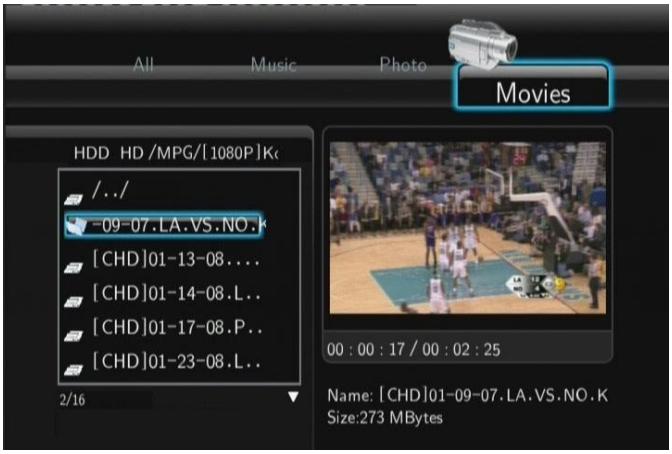

Switch to the Movies tab on the top of your screen by using the left and right navigation menus.
In this mode, all folders and supported video files in current directory will be displayed.

The following buttons can be used to control video playback.

Button	Function
PLAY/PAUSE	Begin/pause playback.
SLOW	Play video in slow motion. Press repeatedly to select the speed.
FR / **FF**	Fast rewind or fast forward. Press repeatedly to select the speed.
PREV / **NEXT**	View the previous or next movie.
REPEAT	Set repeat options: **One**, **All**, **Off**.
ZOOM	Zoom in and out of the image.
INFO	Hide or display the information bar during playback.
GOTO	Go to a selected time stamp in the video file.
A-B	Set the beginning and end points of a section to repeat.
ANGLE	Change the view angle during DVD (with multi-angle) playback.
MENU	Return to the root menu during DVD playback.
AUDIO	Select an audio track while watching DivX video or DVD with multiple audio tracks.
SUBTITLE	Set subtitle options. You can change text encoding and the size/color/offset of the subtitle here.
STOP	Stop playback.

AV Streaming via Network

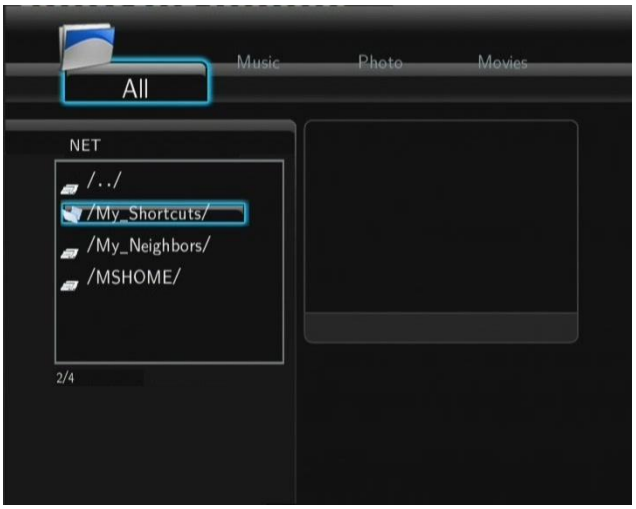

Media files located on computers or devices on the home or local network can be accessed and streamed through the CiragoTV Platinum. Please refer to Network Settings in the Setup Menu in Chapter 3 for details about changing the network settings.
There are two ways to locate shared media files on your local network in the **Network** menu. One is to browse through workgroup; the other way is to browse through '**My_Shortcuts**'.

Browsing though Workgroup

You can locate your computer on the workgroup list by finding your PC name under MS Home or Workgroup and pressing the **ENTER** button to confirm. Then you can select and play the shared media files that you want to browse.

Note:

- While browsing high definition video files (resolution up to 720p / 1080i / 1080p) via Ethernet or WLAN, the video might need time to buffer. This is normal due to the limit of network speeds or wireless signal strengths. Please wait patiently for your video to load.
- Due to different network conditions, sometimes the workgroup might not be displayed. If this happens, use '**My_Shortcuts**' to browse shared files.

Browsing through 'My_Shortcuts'

You can also set '**Specific File Server IP**' and access it from '**My_Shortcuts**' in the menu.

- Press the **MENU** button and a pop-up menu will appear.

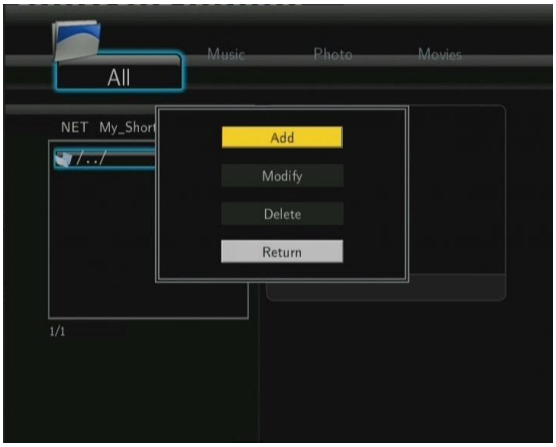

- Select **Add** to open a pop-up menu where you can input **Label**, **Net User ID**, **Net Password**, **Domain**, **Host Name**, and **Specific File Server IP**. Select **OK** to confirm, **Cancel** to cancel, or **Simple** / **Detail** to switch between simple and advanced options.

- Select the shortcut you added and press the **ENTER** button to confirm. Then you can select and play the shared media files on the destination computer.

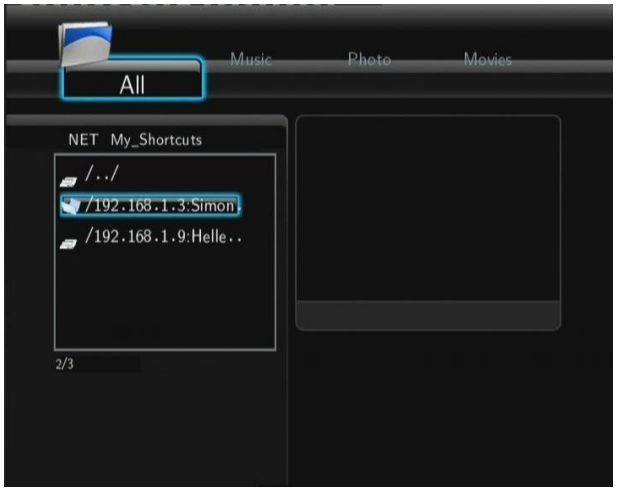

AV Streaming via UPnP-server

A built-in UPnP (Universal Plug and Play) client has been integrated into the CiragoTV Platinum, which enables it to detect UPnP Media Servers on the local network and browse and stream their media files.

Installing UPnP Media Server on your PC

There are a lot of free and commercial UPnP Media Server software, such as Windows Media Connect, Windows Media Player 11, XBMC Media Center (Linux/Mac/Windows), MediaTomb (Linux), PlayOn and TVersity. Depending on which one suits you best, you can install one of them on your computer.

Watching Netflix, Hulu, YouTube and more on your TV

PlayOn is a media server that runs on your computer (Windows only) and enables you watch online media like Netflix, Hulu, YouTube, CNN, Amazon VOD, Comedy Central, ESPN, Food Network and more directly on your TV using the CMC3000!

Download PlayOn and enter in your Netflix, Amazon, Hulu and YouTube login information. In the “General Settings”, make sure the PlayOn Media Server is running.

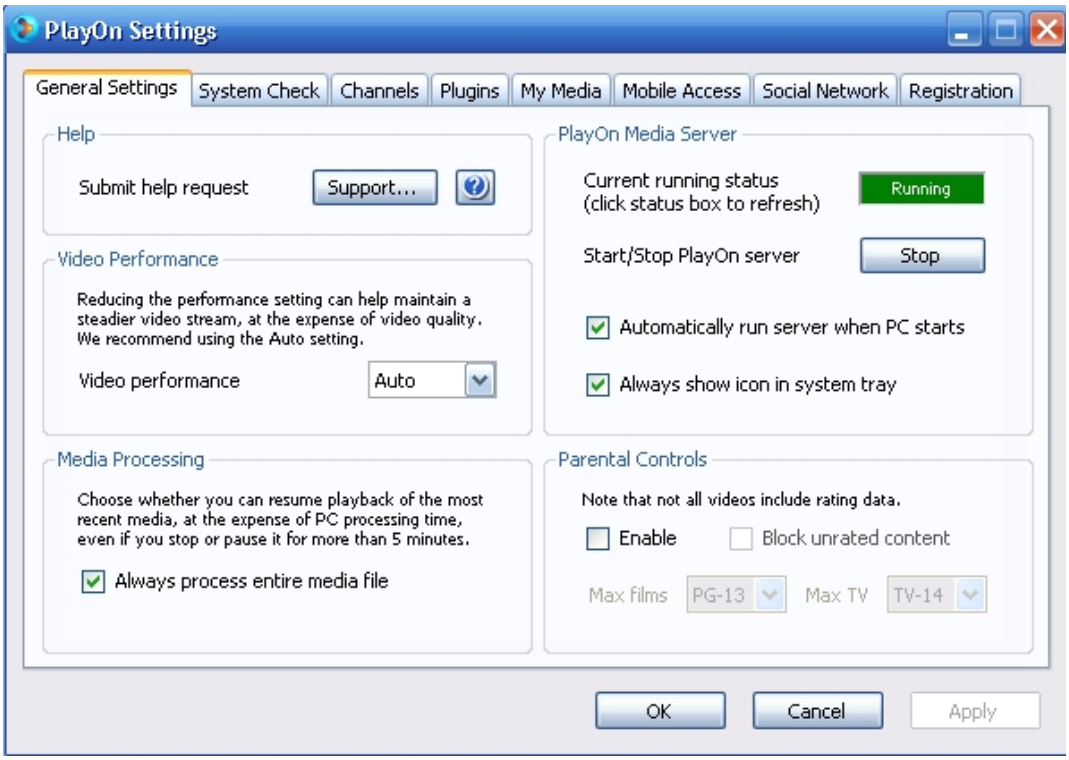

On your CMC3000, go to Browser > UPnP. The computer running PlayOn will be displayed as PlayOn (Computer name). Select the computer and a list of all the available media services will be displayed.

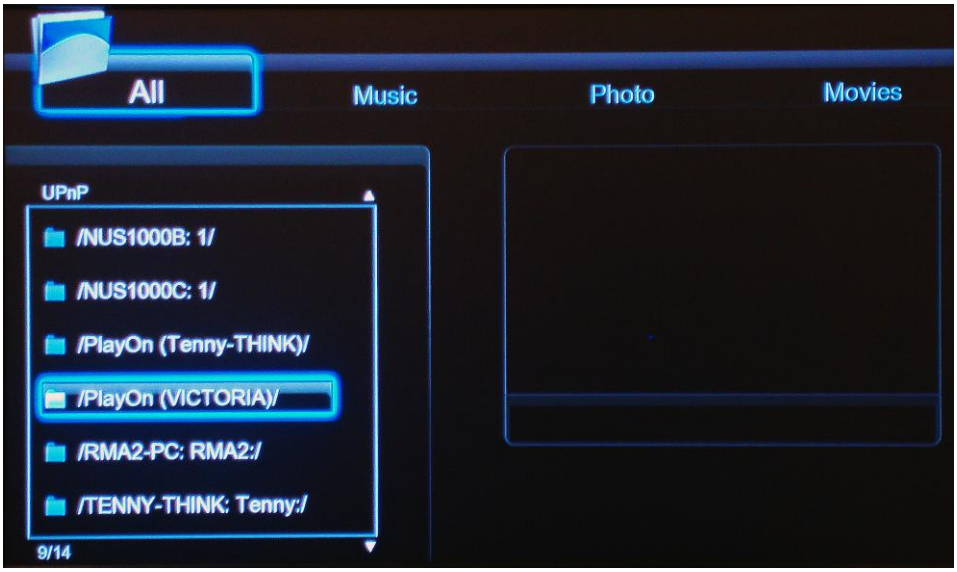

Please remember to leave your computer on in order to access this feature. For more information on getting PlayOn and how to use it with the CMC3000, please visit www.cirago.com/playon.

Sharing Media on your PC

The Media Sharing feature of Windows Media Player 11 lets you enjoy the contents of your Windows Media Player library from anywhere in your home.

- Open Windows Media Player 11, click **Library** > **Add Library** > **Advanced Options** to add or remove media files from the library.

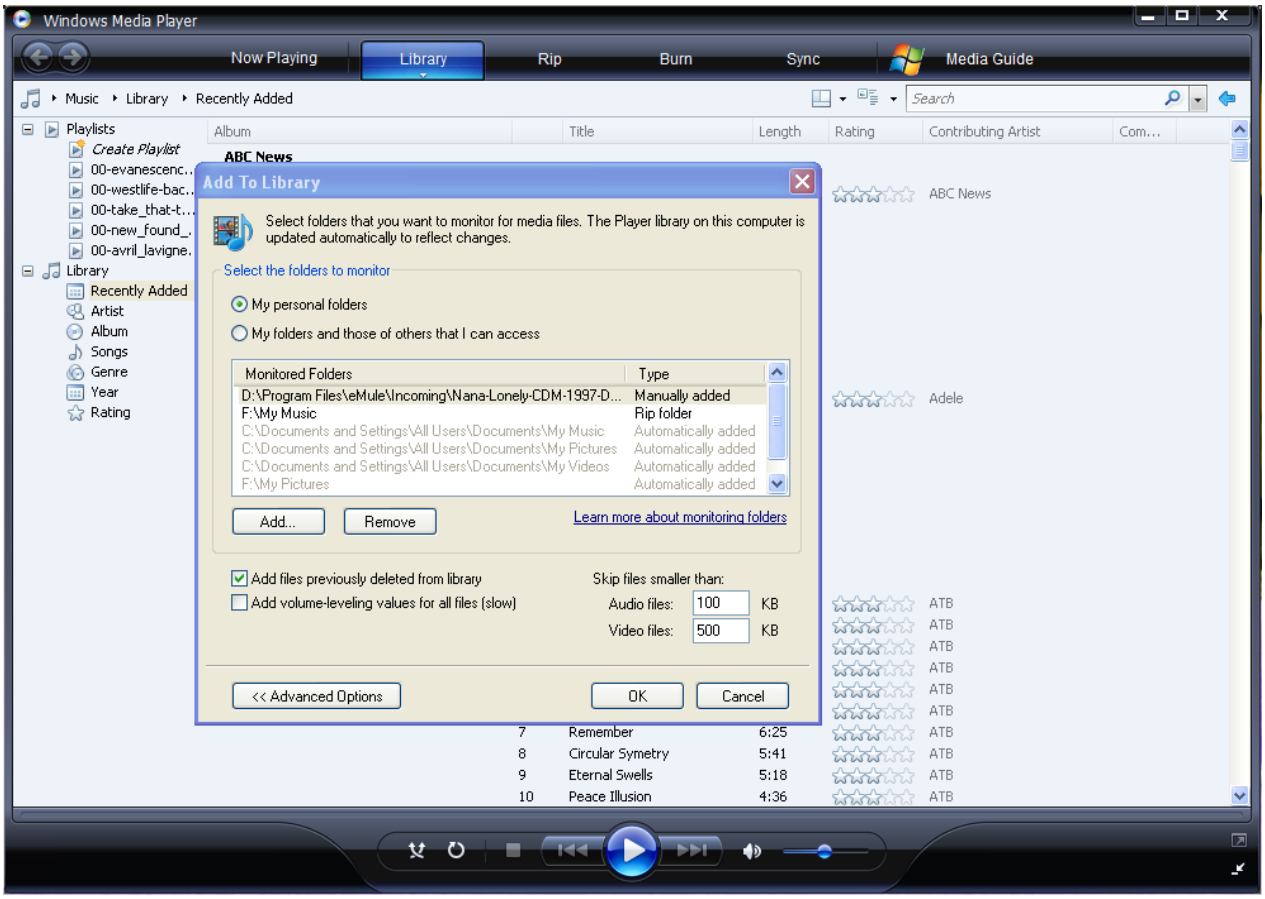

- Click **Library** > **Media Sharing.** Allow or deny devices to access the media library. Click **Allow** to authorize your CiragoTV Platinum.

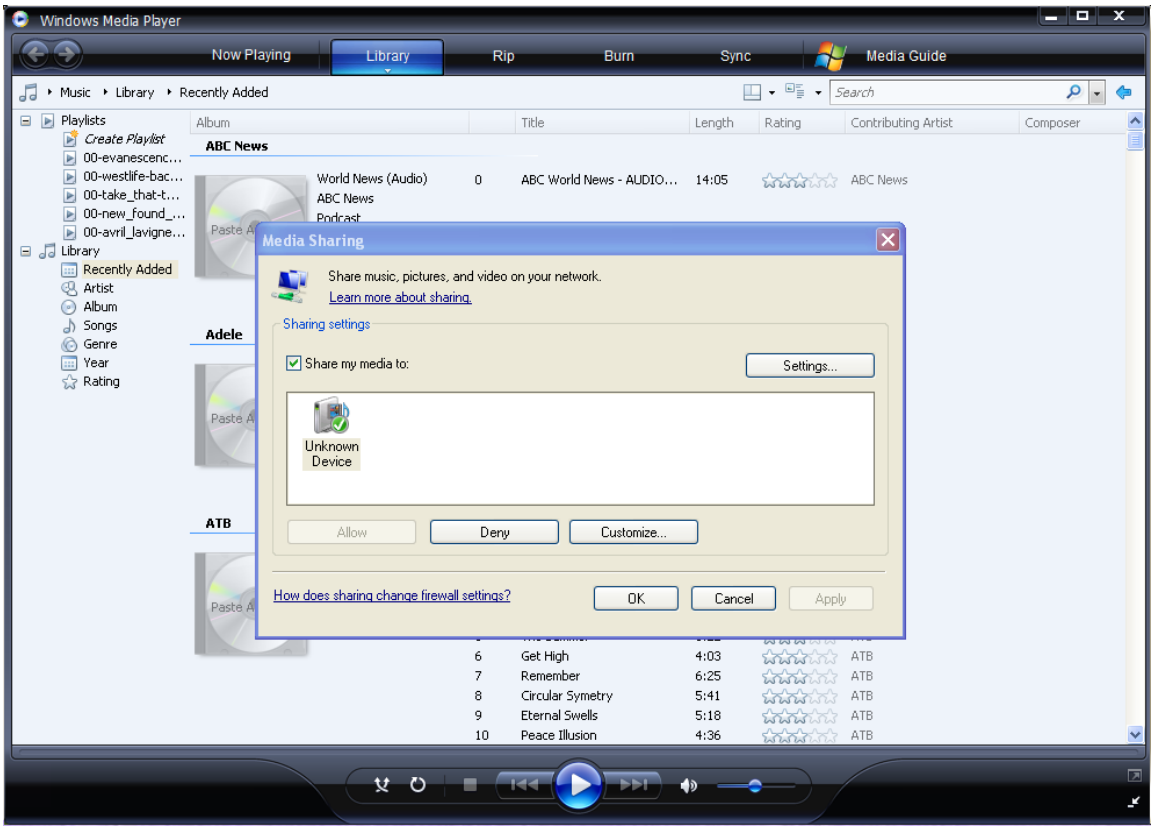

Streaming Media on your CiragoTV Platinum

- Connect your player to the home network (LAN or WLAN).
    - Go to **Browser** > **UPnP** menu on the player, select the UPnP-server
- Browse the media library shared by Windows Media Player 11.

Note:

- Make sure your CiragoTV Platinum and your computer are on the same local area network and subnet.

- Firewalls may prevent your CiragoTV Platinum from communicating with your computer. Please open the ports manually and add your CiragoTV Platinum to the 'trusted' list, or disable the firewall temporarily.

Renaming / Deleting Files

When navigating the browser menu, press the **MENU** button on the remote control to activate a popup menu where you can rename or delete files or folders.

Managing Playlists

Instead of browsing through all the hard drive content for the files you want, add them to the playlist and enjoy them at any time. There are tabs located on the top of the screen for ALL, MUSIC, PHOTO, and MOVIES. When you are adding files to the Playlist, make sure you are in the desired tab. For example, if you are adding music files to your Playlist, make sure you are in the MUSIC tab. If you do not select a tab, all the selected files will be stored in the ALL tab.

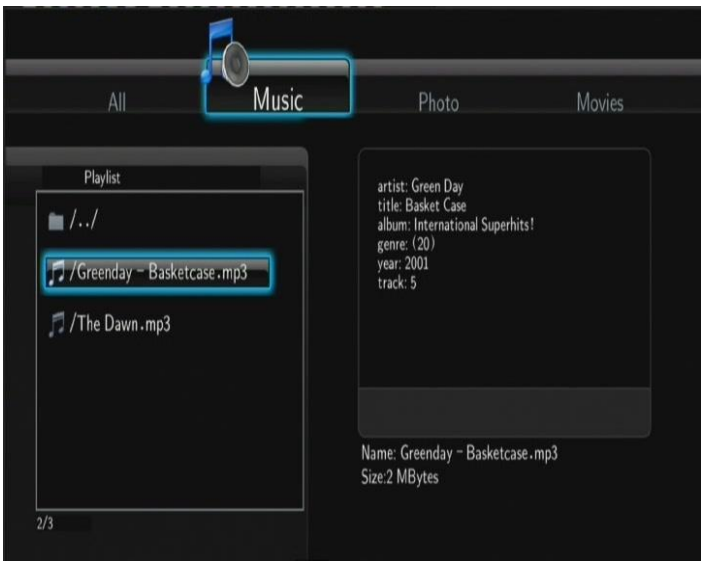

From the home menu, select Playlist. Press the **LEFT** / **RIGHT** buttons to select between **All**, **Music**, **Photos**, and **Movies** tabs.

Adding files to Playlists

Choose the file you wish to add to the Playlist, press the **SELECT** button, and a check mark will appear next to the selected file. Press the **CONFIRM** button to confirm your selection, and then an on-screen message "Added to Playlist" will be displayed. Multiple selections are allowed. Only files located on the built-in hard drive can be added to playlists.

Deleting files from Playlists

If you wish to delete a file from the playlist, press the **SELECT** button to select, and then press the **CONFIRM** button to confirm.The on-screen message “Deleted from Playlist” will be displayed.

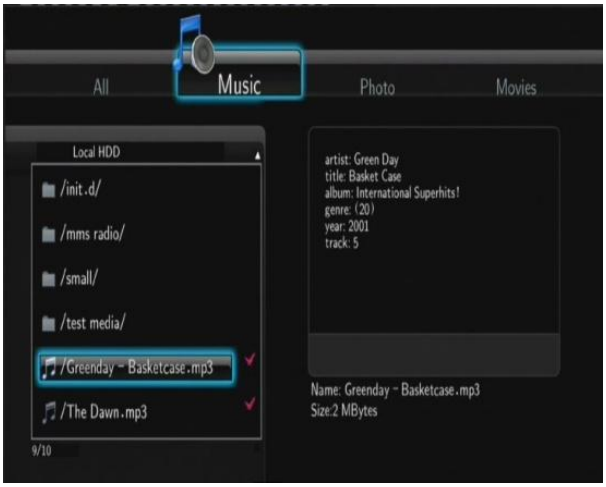

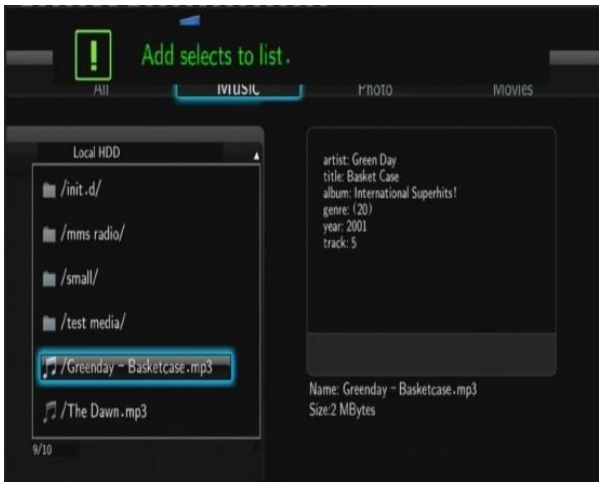

Media Library

The Media Library consolidates all the music, photo, and movie files located on the built-in hard drive in one place for easy browsing and searching through a large list of files. Go to the home menu and select **Media Library**.

Every time files are added to the built-in hard drive, whether they are copied from a memory card or external hard drive, or they are downloaded using the P2P Sharing menu, the Media Library needs to be updated to show the new files. Select **Update** from the options on the screen to update the Media Library.

In order to use the search function more efficiently, you are encouraged to use the following rules to name the movies stored on the built-in hard drive.

Naming Convention: [Name][Actor][Genre][Year].extension

Examples:
[Enchanted.CD1][Amy Adams][Love][2007].avi
[The.Dark.Knight.CD1][Christian Bale][Action][2008].avi, etc.

Music, Photo and Movie Libraries

Use the **LEFT** / **RIGHT** navigation buttons on the remote control to select the **Music, Photos, or Movies** tab. The options available in each menu are slightly different, but they all allow for easy searching of the aggregated files.

Update	Select to update and synchronize all the music stored on the internal HDD to the library.
Search	Select to search for music files by their names. 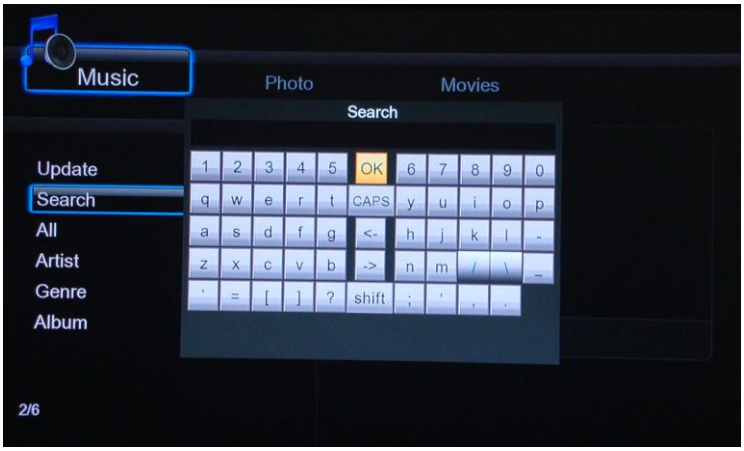 Use the **navigational** buttons to navigate the keyboard, and press the **ENTER** button to confirm. Select OK and press the **ENTER** button, and then the search results will be displayed on the screen.
All	Select to list all the music files in the library.
Artist / Genre / Album / Date / Year	Select to search files by artist name, genre, album, date or year.
Quick-Search	You can also press the **RIGHT** button to turn on a Quick-Search bar while browsing music files in the library. 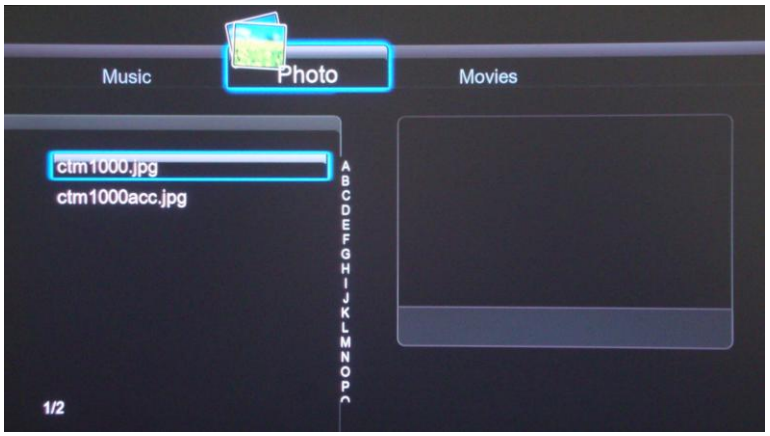 Press the **UP** / **DOWN** button to select characters on the Quick-Search bar, and press the **ENTER** button to confirm. Once you press **ENTER**, music files with names starting with the specific characters you selected will be displayed on the screen. Press the **LEFT** button to delete characters, and press the **BACK** button to close the Quick-Search bar.

File Copy Menu

Select the **File Copy** icon from the home menu to enter the File Copy menu. This menu allows you to copy files between Removable Devices (Card, USB), the built-in hard drive (HDD), and Network.

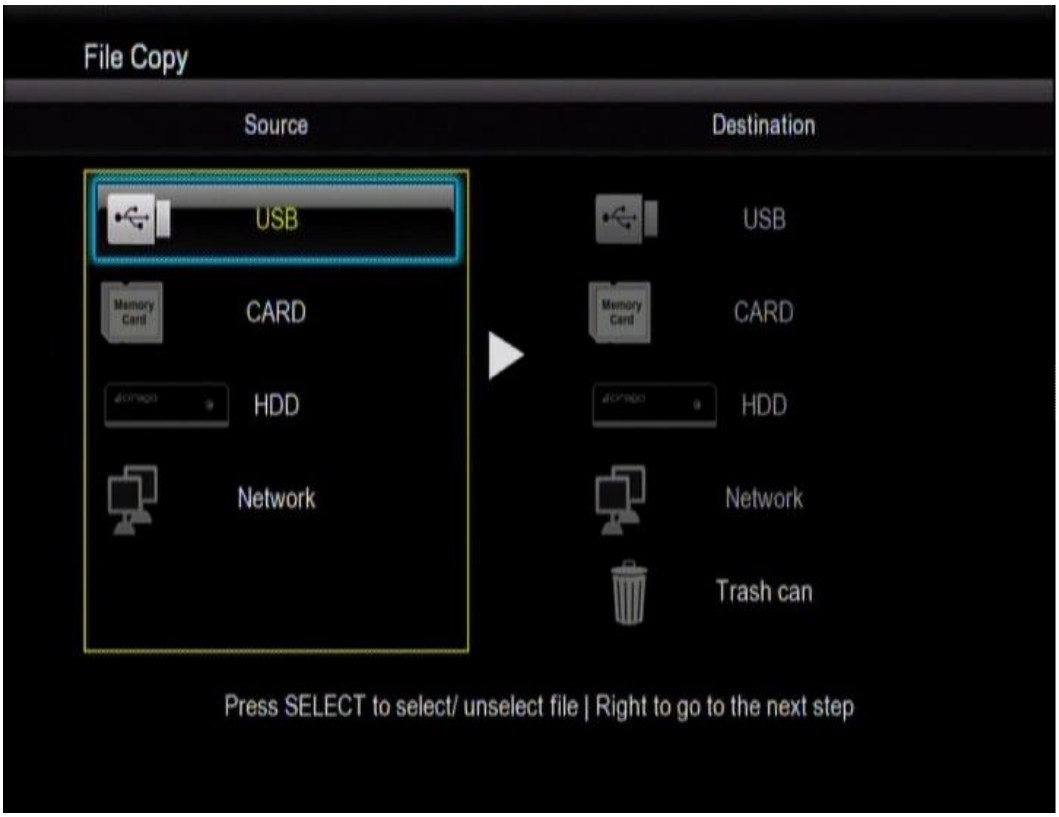

The following buttons can be used under the file copy menu.

Button	Function
UP / DOWN	Move cursor up / down to select devices, folders
RIGHT	Go to the next step.
MENU	Select (or cancel) folders or files (The selected items will be checked).
STOP	Cancel all selections.
ENTER	Confirm the selected options.

Please refer to the following operations to copy / move folders or files between devices.

Step 1: Select the source device and destination device.

Step 2: Select the source files you want to copy.

Step 3: Select the destination folder to store the selected files.

Step 4: Select **Copy** or **Move** to proceed.

Internet Radio

The CiragoTV Platinum allows you to enjoy thousands of Internet radio stations streamed for free through ShoutCast. To access this feature, begin by selecting the **Internet Radio** icon from the home menu.

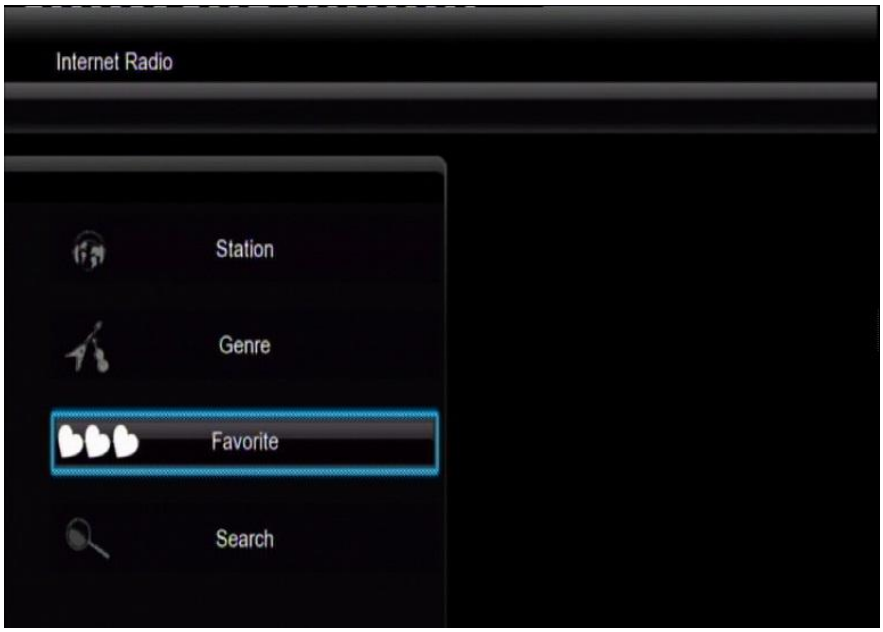

Station

- All downloaded stations will be listed under this menu.

Genre

- You can search for stations by genre (pop, rock, jazz, etc.) under this menu.

Favorite

- Your favorite stations can be kept under this menu.

Note:

- Make sure the CiragoTV Platinum is connected properly to a LAN or WLAN with Internet access. Please refer to Network Settings in the Setup menu in Chapter 3 for more details.
- Please be patient while the Internet radio stations are loading. There are thousands of stations, so loading them may take some time.

The following buttons can be used under this menu.

Button	Function
UP / **DOWN**	Move cursor up / down to select station, channel, and genre.
PREV / **NEXT**	Page up / down.
ENTER	Confirm and enter the selected menu.
MENU	Add / delete a station to / from **Favorite** while it is highlighted.
PLAY	Begin playback after a channel has been selected.
STOP	Stop playback.
RETURN	Return to the previous menu.

P2P Share Menu

The P2P, or Peer 2 Peer menu, allows you check the status of torrent files that are downloading. This menu also allows you to change the P2P file sharing settings.

Please be aware that downloading and sharing torrent files may be illegal. Please check local laws before using this function. Cirago is not responsible for any liability arising from downloading and sharing of P2P files.

Select the **P2P** icon from the home menu. Press **LEFT/RIGHT** button to enter into download menu and BT setup tabs.

Add a torrent

Locate your torrent file in the Browser menu, then press the **MENU** button on the remote control to add the torrent to start downloading. Arrows will appear next to each torrent file.

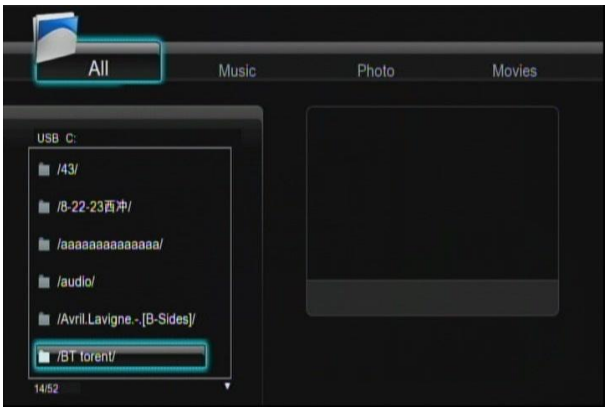

Download Menu

After the torrent files have been added, the download progress can be viewed in the Download menu.

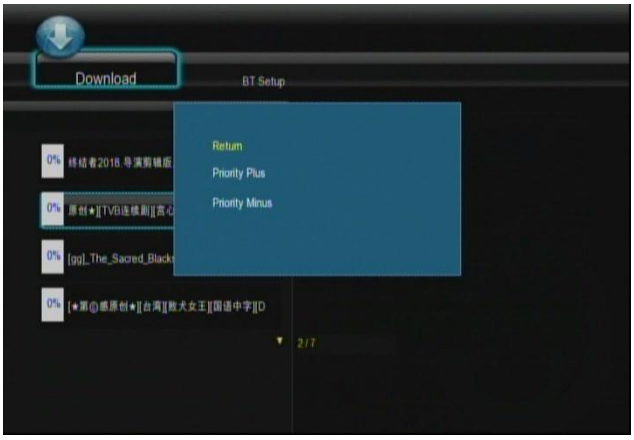

The following buttons can be used under this menu.

Button	Function
UP / DOWN	Move cursor up / down.
MENU	Press to adjust the priority of the download task.
PAUSE	Press to pause the download.
PLAY	Press to start download.
STOP	Press to stop the download.
RETURN	Return to the previous menu.

BT Setup Menu

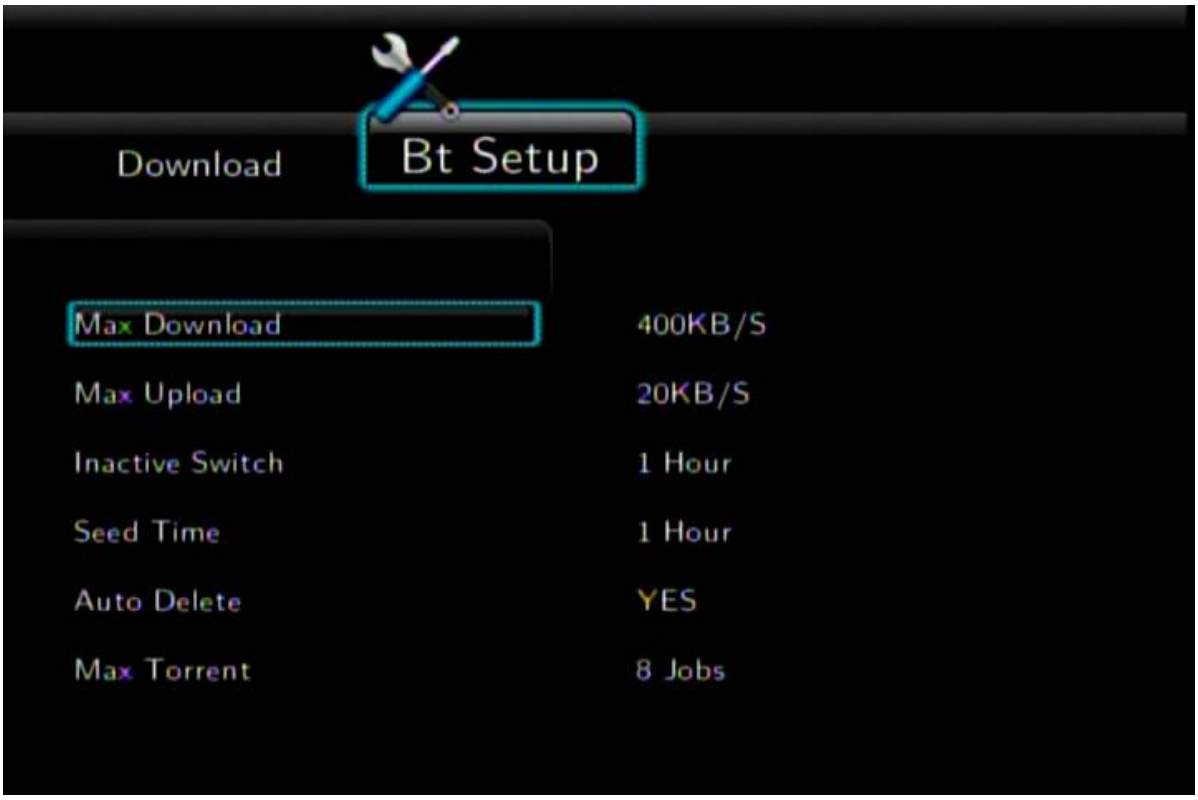

In the **BT Setup** menu, you can configure the following settings. Use **UP/DOWN** and **ENTER** to change the settings.

- Set the maximum download rate.
- Set the maximum upload rate.
- Set the inactive switch to specify when to start the next download automatically. This applies to downloads that have been inactive or idle for a certain number of hours,
- Set the seed time.
- Set to automatically delete finished torrent files after they have been downloaded.
- Set the maximum number of simultaneous download tasks.

Web Access to P2P Share feature

You can upload and monitor shared files through a web browser. Type in the IP address of the CiragoTV Platinum in the address bar of your browser to go to the web interface of the CiragoTV Platinum BitTorrent Download Portal. You can find the IP address by going to Home Menu>Setup>Network.

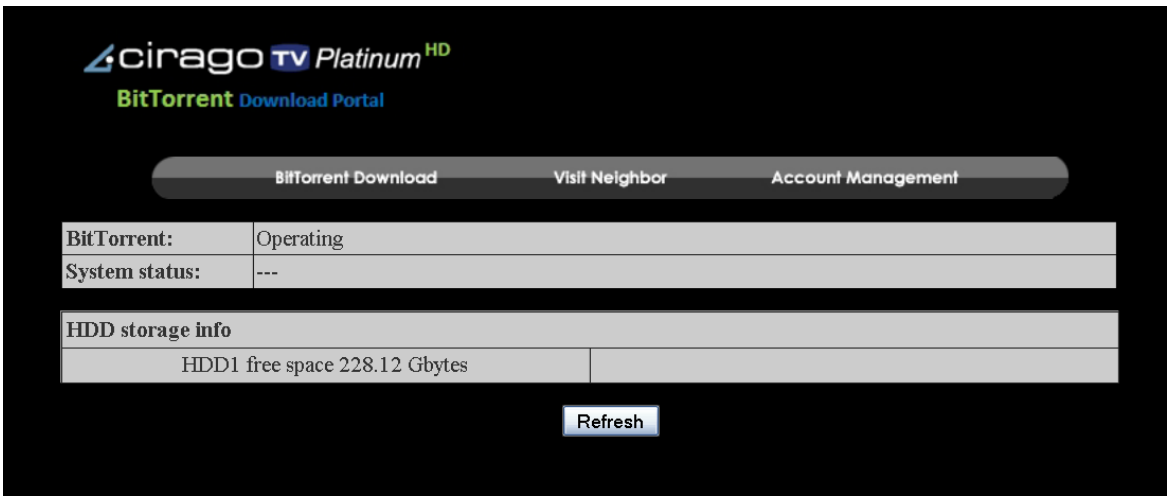

Click on the BitTorrent Download tab to access the Torrents page. From this page, you can add new torrents, start, stop, delete, increase / decrease priorities, and manage your preferred settings.

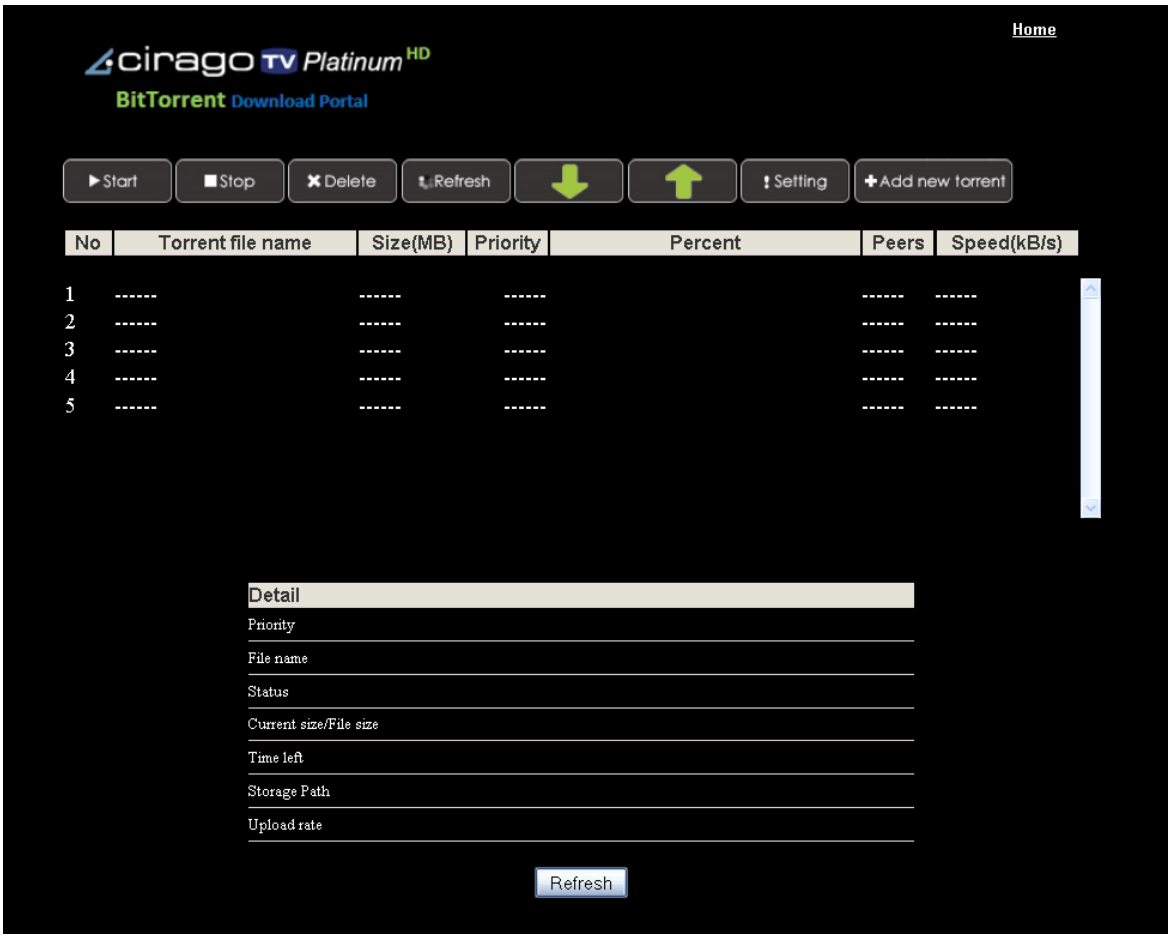

Click **Add new torrent** to add new torrents.
Click **Setting** to change the P2P settings.

Button	Function
Start	Select one or more of the uploaded torrents and press start to commence downloading
Stop	Select one of the uploaded torrents and press stop to pause downloading
Delete	Press to delete the torrent
Refresh	Press to refresh the torrent list
↓ ↑	Select one or more of the uploaded torrents and press the arrow keys to increase or decrease the priority
Setting	Click to change the current P2P settings
Add new torrent	Click to add a new torrent to the list

Setup Menu

The Setup menu allows you to personalize and configure the preferences for your CiragoTV Platinum.

To select a Setup option:

- Go to ***Home Menu > Setup***, or press the **SETUP** button on the remote control. There are several Setup options, including **Audio**, **Video**, **REC**, **Network**, **System**, and **MISC**.

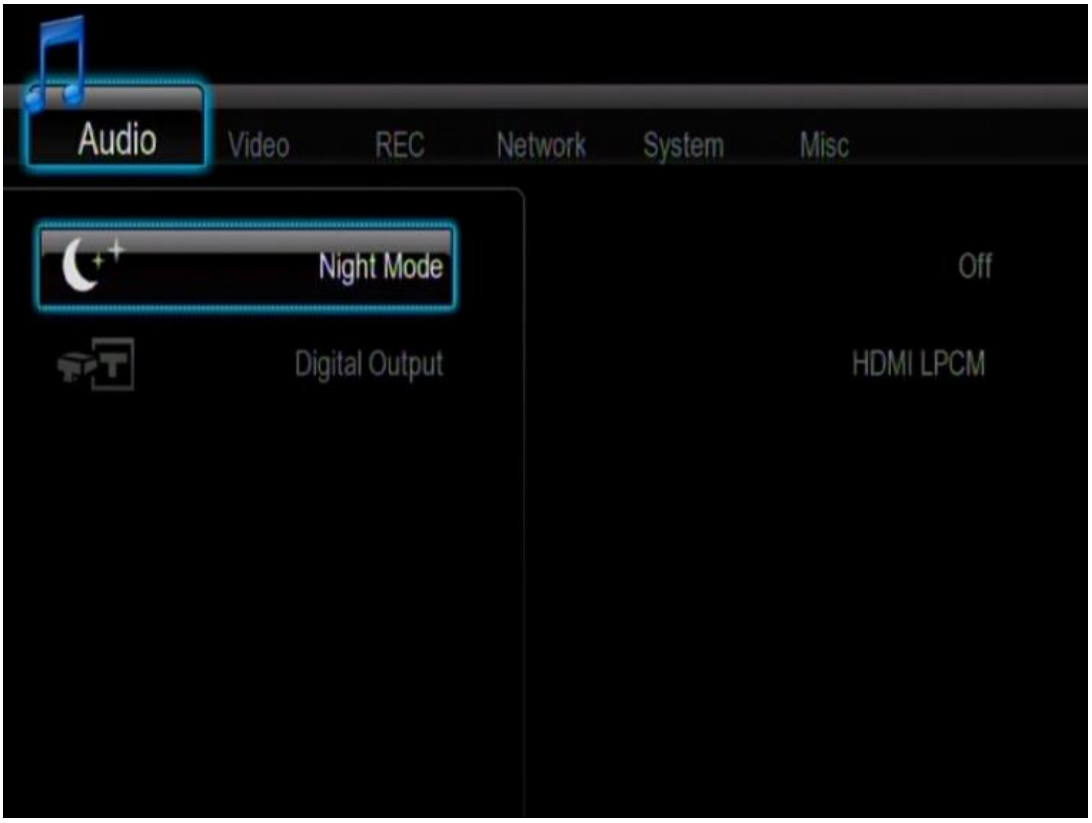

Audio Settings

Use this menu to configure audio settings.

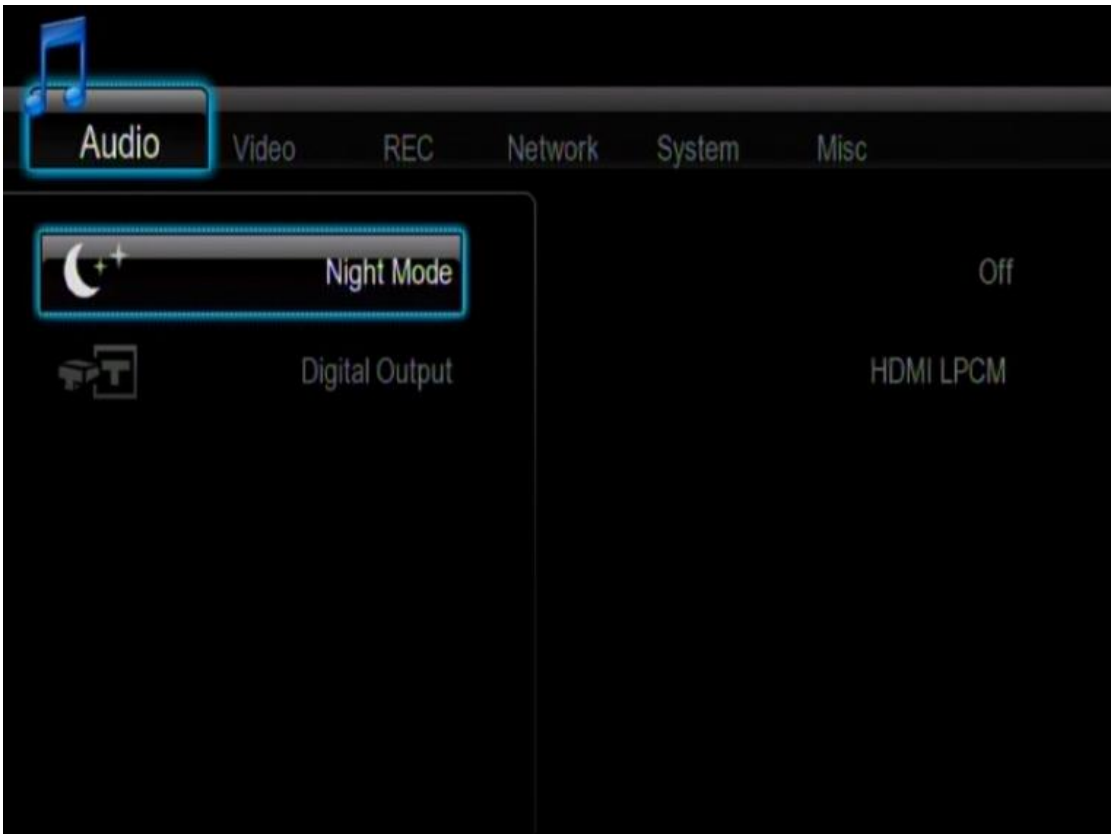

Night Mode

- Choose between **Off** / **On** / **Comfort**. If the option is turned on, the audio output volume will be decreased to create a more comfortable setting.

Digital Output

- Choose between **HDMI LPCM** / **HDMI RAW** / **SPDIF LPCM** / **SPDIF RAW**. In raw mode, Dolby Digital, DTS, or MPEG sound can be bypassed to the HDMI TV or Digital amplifier.

Video Settings

Use this menu to configure video settings.

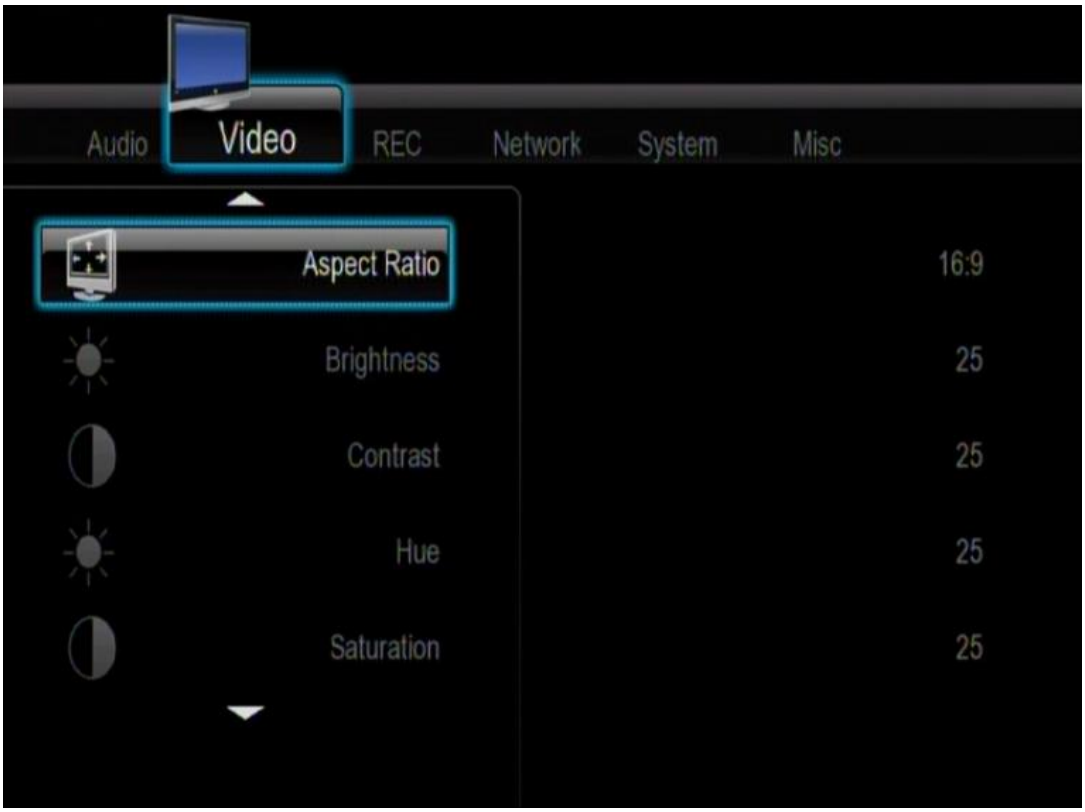

Aspect Ratio

- **Pan Scan 4:3**: Displays a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.
- **Letter Box 4:3**: Displays a wide picture with two black borders; one on the top and one on the bottom of the 4:3 screen. Select this option when a standard 4:3 TV is connected.
- **16:9**: Compresses the image to convert the whole image to 16:9 size. Select when a 16:9 TV is connected.

Brightness

- Adjusts the level of brightness.

Contrast

- Adjusts the level of contrast.

Hue

- Adjusts the level of hue.

Saturation

- Adjusts the level of saturation.

TV SYSTEM

- Select to adjust video output resolution: **NTSC** / **PAL** / **480P** / **576P** / **720P 50HZ** / **720P 60HZ** / **1080I 50HZ** / **1080I 60HZ** / **1080P 50HZ** / **1080P 60HZ**.

Record Settings

Quality

- Select to set the default recording quality setting.

Press the **UP** / **DOWN** button to select the quality setting desired. The highest quality setting is HQ which requires the most storage space. The other settings reduce recording quality sequentially but require less storage space.

Permanent Timeshift

- Select to set Time Shift mode.

Press the **UP** / **DOWN** button to select from On and Off. Press the **ENTER** button to confirm. If On, the time shift will start automatically while in Video In mode. This allows you to pause live TV and resume the program from the point you left it. While paused, the program is recorded to the HDD, as long as space is available.

Press to activate TIME SHIFT function and wait for the
PLAY arrow to appear on the screen.
Press **PAUSE** to pause the recording.
Press **PLAY** to resume viewing the program.
Timeshift mode remains active until you press the **STOP** button.

REC Device

- Select to set device to save recorded files.

Press the UP **/** DOWN **button to select from HDD and USB. Press the** ENTER **button to confirm.**

Network Settings

Use this menu to configure Ethernet and WLAN (Wireless Local Area Network) settings.

Wired LAN Setup

- **DHCP IP (AUTO)**
  Select to obtain IP address automatically.
- **FIX IP (MANUAL)**
  Select to manually input the IP Address, Subnet Mask, Default Gateway, and DNS Server IP Address.

Wireless Setup

- **Selecting a connection profile**
  This player can store up to three wireless network connections. Press **ENTER** to go to next step, press **CANCEL** to return to the previous menu.
- **Get Connection Mode**

  Choose between **Infrastructure (AP)** and **Peer to Peer (Ad Hoc)**. Press **ENTER** to go to next step, press **CANCEL** to return to the previous menu.

  Infrastructure (AP)
  Infrastructure mode is used to connect computers with wireless network adapters, also known as wireless clients, to an existing wired network with the help of a wireless router or access point.

Get SSID Name

Press **ENTER** to go to next step, press **CANCEL** to return to the previous menu and press **SELECT** to refresh the SSID list.

Note: In the Security list, **WEP** (Wired Equivalent Privacy) and **WPA** (Wi-Fi Protected Access) means that the network is encrypted, i.e. an encryption key is needed to access the network. **NONE** means it is an open system network.

Input WEP / WPA Key

Encryption keys can be inputted via the virtual keyboard. Press the navigational buttons to select, **ENTER** to input, **CAPS** to switch between uppercase and lowercase, **<-** to delete a character, **->** to insert a space, **shift** to make more symbols available, and **OK** to confirm.

Test connection

Please wait patiently as the testing process may take a while. If the test is successful, then the network information (Profile Name, IP address, Subnet Mask, Gateway, etc.) will be displayed on the screen.

Peer to Peer (Ad Hoc)

Peer to Peer mode, also known as Ad Hoc mode or computer-to-computer mode, is used to connect wireless clients together directly, eliminating the need for a wireless router or access point.

Ad-Hoc Setup

Press **ENTER** to go to next step, press **CANCEL** to return to the previous menu.

System Settings

Use this menu to configure system settings.

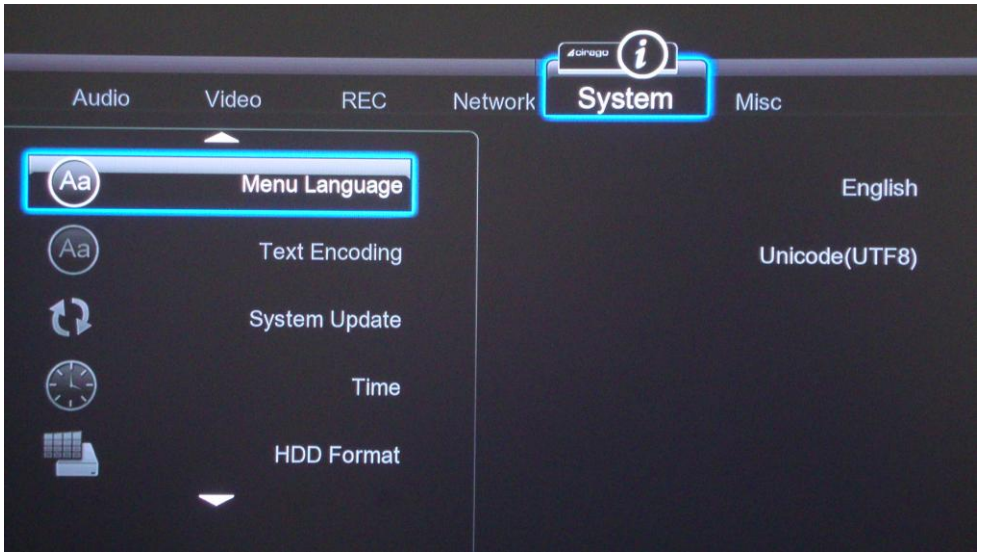

Menu Language

- Select to choose the language used in all menus on the media player.

Text Encoding

- Select to set the text encoding option (subtitle display).

Login Control

- Select to turn on / off Login when accessing the P2P web browser menu, BitTorrent Download Portal.

System Update (Firmware Upgrades)

- Select to upgrade the firmware on the CiragoTV Platinum if new firmware is available. Please refer to Firmware Upgrades in Chapter 4 for more details.

Time

- Select to set the system time.

HDD Format

- Select to format the built-in HDD. Please refer to HDD Format in Chapter 5 for more details.

  Note: Formatting the hard drive will erase all the data that is on the hard drive.

System Info

- Select to view system information (firmware version, HDD info, Mac address, etc.)

Restore Default

- Select to restore factory default settings.

Miscellaneous

Use this menu to adjust miscellaneous settings.

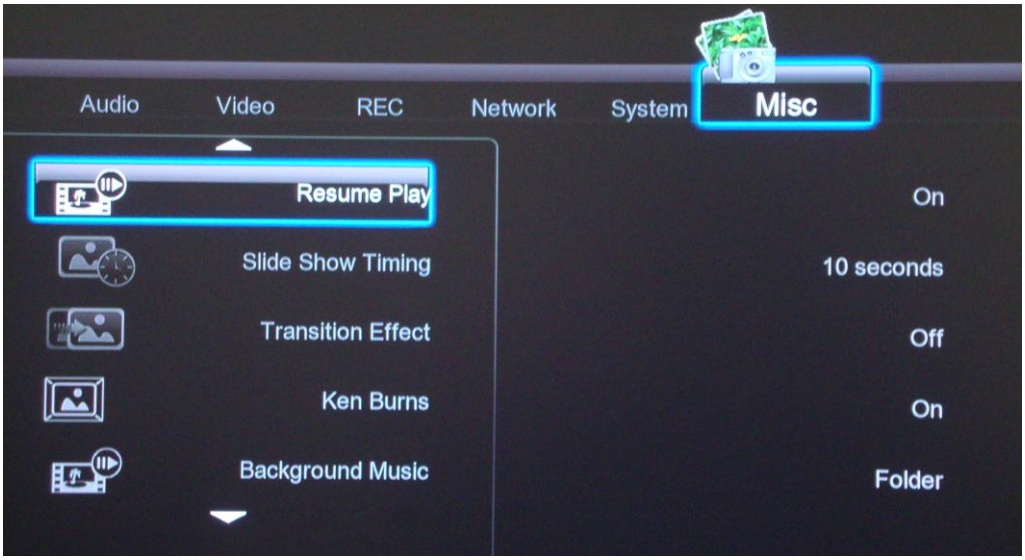

Slide Show Timing

- Select to set the time interval for photo slide show.

Transition Effect

- Select to set the transition effect for photo slide show.

Background Music

- Select to set the background music options while viewing pictures: **Off / Folder** / **Playlist**.

Screen Saver

- Select to turn on / off screen saver.

Movie Preview

- Select to turn on / off movie preview in the browser menu.

Resume Playback

- Select to turn on / off resume playback feature for movies. When enabled, the media player will remember the point at which you left off.

Chapter 4. Firmware Upgrades

The firmware is the operating system installed on the CiragoTV Platinum. Firmware upgrades can add new features, improvements and bug fixes.

New firmware can be downloaded from our website www.cirago.com. To check the firmware version currently installed on your CiragoTV Platinum, go to Home > Setup > System > System Info. If there is a new firmware version available, download it and follow the instructions below.

1. Copy ‘install.img’ to the root directory of a USB flash drive, and connect it to the USB HOST port of the player.
2. Go to **Home menu > Setup > System > System Upgrade**
3. Press **ENTER** to confirm.

Firmware installation will begin, and when completed, the system will restart automatically.

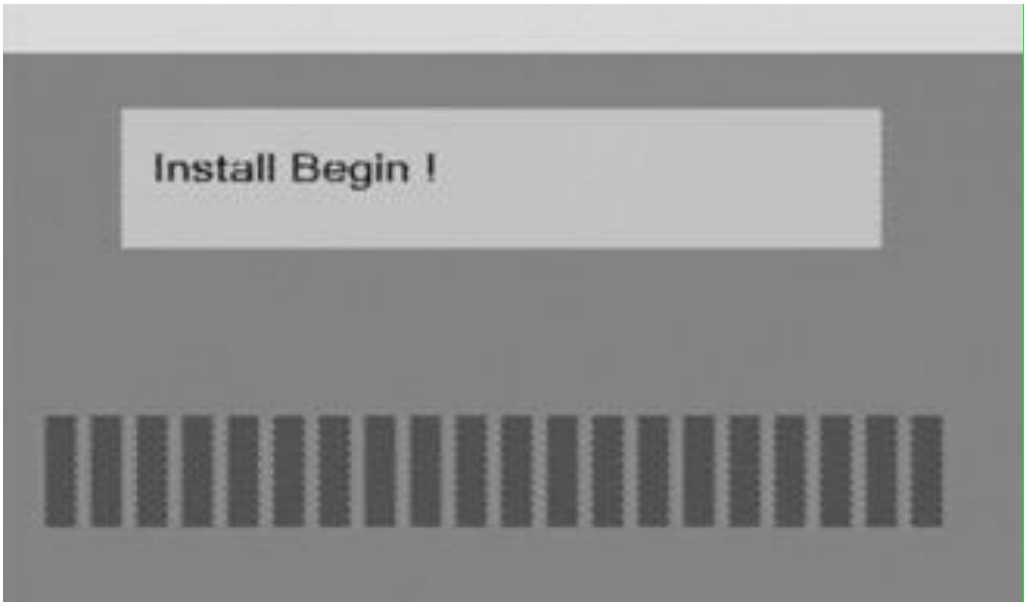

Do not turn off the CiragoTV Platinum when the firmware upgrade is in progress.

Chapter 5. Appendices

Frequently Asked Questions

Question 1. When I try to disconnect the USB device, I keep getting the message, "The device 'Generic volume' cannot be stopped right now. Try stopping the device again later." What should I do?

Answer:

Close any program that might be accessing data on the CiragoTV Platinum, including Windows® Explorer. If that does not work, close all programs, wait another 20 seconds, and then try the green arrow icon again. If that still does not work, shut down the CiragoTV Platinum and disconnect the USB cable.

Question 2. Why am I finding strangely named files and folders not created by me in the Multimedia Center?

Answer:

Most likely, the CiragoTV Platinum's file allocation table (FAT) has been corrupted. This might be due to the CiragoTV Platinum shutting down (due to low battery power) while reading or writing to your computer by the USB connection. Windows and Macintosh often write extra files to the hard disk such as finder.def or System volume info. These are normal and will not do any harm to the CiragoTV Platinum.

Question 3. I used my CiragoTV Platinum to transfer files back and forth between different computers. Will defragmenting the CiragoTV Platinum's hard disk do any harm to it?

Answer:

Defragmenting the hard disk will not harm it. Defragmenting may be useful after many files have been transferred to and from the CiragoTV Platinum. Make sure no other programs are running while using the Windows® defragment utility. Make sure you have connected the CiragoTV Platinum with the external power adapter during this procedure.

Question 4. My files have disappeared from the CiragoTV Platinum. What do I do?

Answer:

Make sure you browse for files via the correct browser mode which seperately groups Photos, Music, and Movies. To view all files in the selected directory, select the "All" tab.

Question 5. When the CiragoTV Platinum is powering on, is it normal for the TV screen to display the logo, then a blue screen, and then go to the main menu?

Answer:

This is normal. When the system initializes, it will setup the corresponding parameters so that it can output the correct video signal to the TV. During the initializing time, TVs will attempt to stabilize signals and various TVs react differently during this interval. Some TV screens will flash, while others perceive this stage of activity as a no signal and will display a blue screen.

Question 6. I can't seem to get the SSID name. The screen displays, 'Can't get any SSID!'. What do I do?

Answer:

Upon connection to the player, the WLAN USB Adapter needs some time to initialize. Please wait about 1~2 minutes and then try refreshing the SSID list again.

Question 7. I cannot see files shared on my computer via Browser > Network menu. What should I do?

Answer:

Please check the following items:

1) Connect the CiragoTV Platinum to the network and obtain an IP address;
2) Enable NetBIOS of TCP/IP on your computer;
3) Check your PC's firewall settings;
4) Enable your PC's 'Guest' account;
5) Share the folders you wish to browse on your PC, and make sure that 'Everyone' or 'Guest' has the right to access them.

Question 8. I configured everything correctly, but still cannot get the wireless network or UPnP function to work.

Answer:

Are you using a firewall such as Norton Internet Security, McAfee Personal Firewall, Zone Alarm, etc. or even the built-in firewall of Windows XP? (Don't forget that Service Pack 2 for Windows XP automatically upgrades your firewall and turns it on by default)

If you have a firewall, it may need to be configured or have exceptions created to allow you to see and communicate with the player on the network. To test if your firewall is preventing network communication (including PING and access shared folders), try disabling it to see if you can connect. If you can connect with the firewall disabled, you may need to add the player to the 'Trusted' list or configure the firewall for local intranet access. If all else fails, you can disable your firewall long enough to use the player, then enable it again when you are finished.

Question 9. If I am using the 802.11n Wi-Fi dongle with an 802.11n wireless router, then why is the speed still 802.11g 54Mbps rather than 300Mbps?

Answer:

The IEEE 802.11n Draft standard prohibits using high throughput with WEP or TKIP as the unicast cipher. If you use these encryption methods (e.g. WEP, WPA-TKIP), your data rate will drop to 54 Mbps. You may contact the Access Point or router manufacturer to download the latest firmware, or try other encryption methods (WPA2-AES or WPA2-TKIP), or choose to configure an unsecured profile, but this option is not recommended.

Question 10. Where can I find .torrent files for BitTorrent download?

Answer:

A lot of torrent sites can be found on the Internet, such as The Pirate Bay, Isohunt.com, TorrentPortal.com, Mininova.org, etc. Please be careful of the contents you are downloading and your usage of them. Misuse might result in copyright infringement and

violation of local laws.

Question 11. Why are some supported photo formats not shown in the photo function?

Answer:

In the JPEG format there are different modes. The player doesn't support all the modes. So you have to change your photo format first as follow:

(1) Use Photoshop to open the photo;

(2) Choose "File" then "Save as" from the menu, as the picture on the left hand side shows. Select the JPEG picture format, input the file name and click the "Save" icon;

(3) After you've clicked on the "save" icon, a new window will appear, as the picture on the right hand side shows, and select "Baseline (standard)" or "Baseline optimized";

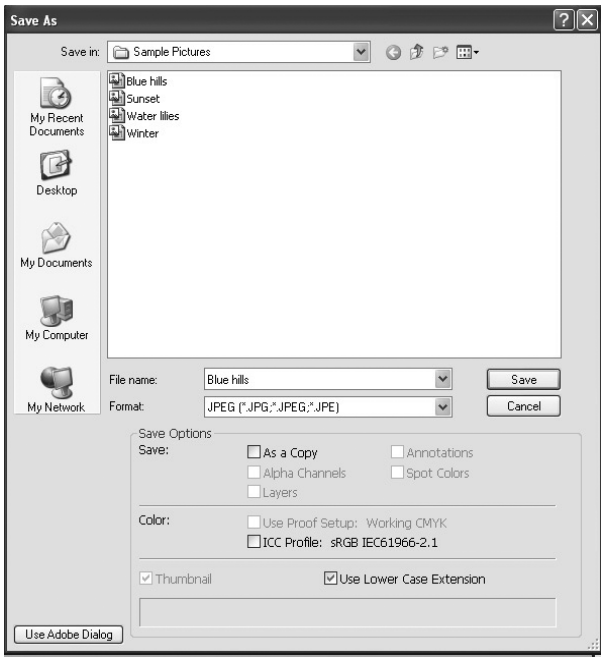

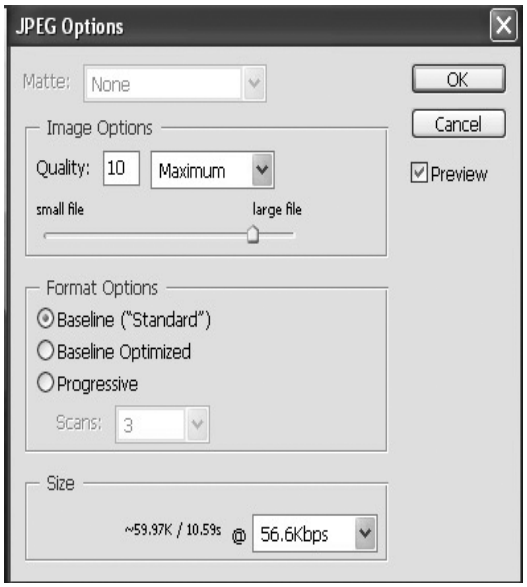

(4) Click the "OK" icon.

Question 12. Why can't the Multimedia Center find the hard disk?

Answer:

Make sure the firmware is installed correctly and no system partitions on the HDD were deleted. If hard disk failure occurs, please backup your data and reinstall the firmware.

Question 13. Some functions like recording, time shift, etc. do not work. What should I do?

Answer:

If you find that some functions do not work properly on the CiragoTV Platinum, please restore the system settings to the default settings. (Refer to System Settings in the Setup Menu in Chapter 3).

Formatting the Hard Drive

The CiragoTV Platinum comes preinstalled with a built-in hard drive. There is no need to format the hard drive, but if you wish to at any time, go to **Home > Setup > System > HDD Format** and follow the instructions listed below.

Step 1: Select **OK** on the **Warning** page, press **ENTER** to confirm.

Warning !!!
You are going to enter the hard disc format process. All data in this hard disc will be lost after this process.
Please read the user manual to get more information !!!
OK
Cancel

Step 2: Press the **UP** / **DOWN** button to adjust the capacity of time shift buffer.
Press the **LEFT** / **RIGHT** button to select Next, and the **ENTER** button to confirm.

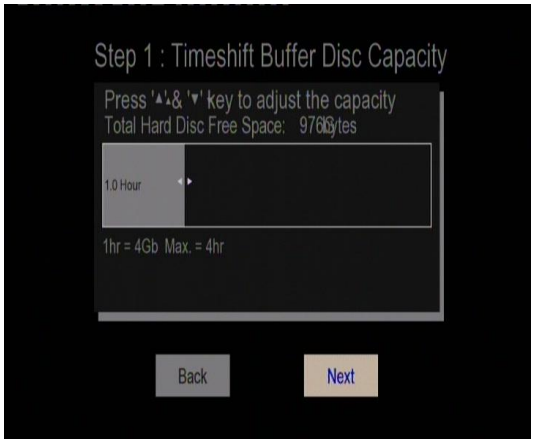
Step 1 : Timeshift Buffer Disc Capacity
Press '▲'& '▼' key to adjust the capacity
Total Hard Disc Free Space:
1.0 Hour
1hr = 4Gb Max. = 4hr
Back
Next

Step 3: Select **Format**, press **ENTER**, and the hard disk format will start. The formatting process will take a few minutes to complete.

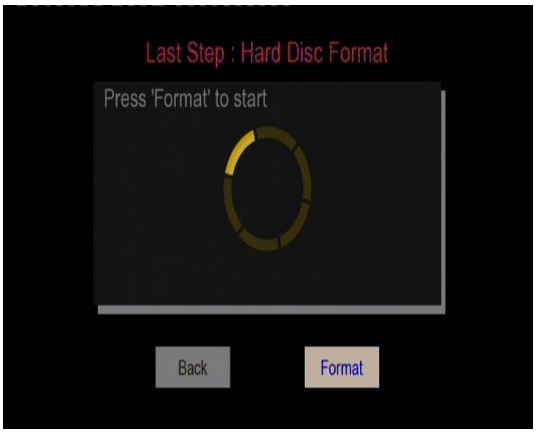

Note: Formatting your hard drive will remove all data stored on it. Please backup all your data before formatting your hard drive.

NAS Function

The CiragoTV Platinum is a Networked Attached Storage (NAS) right out of the box. When connected to a local or home network, it automatically becomes a NAS. The CiragoTV Platinum can see computers and other devices that are connected to the network, and other devices can see the CiragoTV Platinum. This convenient feature makes it easy to share and transfer files to and from devices on the network.

The default network name for the CiragoTV Platinum NAS is “Cirago”. This can be changed if desired in the Home Menu>Setup>Network>Host Name menu. If you have more than one CiragoTV Platinum on your home or local network, we recommended changing the host name so there is no conflict between the different CiragoTV Platinums.

Copyrights and Trademarks

Copyrights

All rights reserved. No part of this manual may be reproduced, or transmitted in any form or by any means, whether electronically or mechanically, without the express written permission from the copyright holder.
Copyrighted materials, such as software, music files, or movies, are protected by local law, and may not be illegally copied or used without permission from the copyright owner.

Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other trademarks are property of their respective holders.

dts 2.0+Digital Out

Manufactured under license under U.S. Patent #’s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Chapter 6. Additional Features

Additional features may be available for use with the CiragoTV Platinum. Please check www.cirago.com/cmc3000 for more information. To install these additional features, follow the instructions listed under Firmware Upgrades in Chapter 4.

Chapter 7. Warranty, Product Registration & Support

Warranty

What your 1 year Cirago warranty *does not* cover:

-Acts of nature, such as fire or static discharge.

-Damage from unauthorized repair, alteration, or accident.

-Damage from misuse or neglect.

-A unit that has been modified or incorporated into other products or has been used for institutional or other commercial purposes.

-Loss of customer's software, firmware, information, or memory data.

-Improper handling or installation.

Product Registration and Support

To register your product online, please go to www.cirago.com/registration

If you are experiencing any difficulty using the CiragoTV Platinum, please try one of the following options before returning your product.

1) Please check the Cirago website for the most recent user manual, firmware updates, product updates and downloads at http://www.cirago.com

2) Contact our technical support team via phone or email.

Phone: 408-331-8822
Email: support@cirago.com

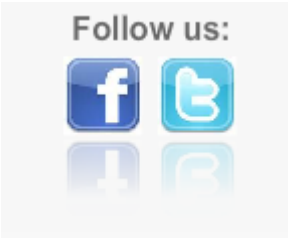

Join us on Facebook and Twitter for product announcements, giveaways, contests and more.

Thank you for choosing Cirago.

VERSION 1.2 ©2010 ALL RIGHTS RESERVED